

ProGauge MagLink LX 4, LX Plus & LX Ultimate Consoles Configuration Manual

Part Number: M2051

Revision: 8



MagLink LX 4, LX Plus & LX Ultimate Consoles

DFS Worldwide Brands



IMPORTANT: Before you use this manual, make sure you have the most recent revision. Look at the revision of this document to make sure it agrees with the most current revision found in the FMS Technical Library. Download the latest revision if necessary.



IMPORTANT: If you have an installation in an area that has possible internet connectivity issues, it is recommended to either print or download these manuals to a mobile device (mobile phone, tablet or iPad) before you go to the installation site.



READ CAREFULLY: OPW Fuel Management Systems and Dover Fueling Solutions cannot be held responsible for installations, configurations or use of its products that does not comply with the most recent documentation available.



NOTE: It will be necessary to have Single Sign-On (SSO) credentials to get access to manuals, instructions, software updates and other important assets. Speak with your FMS sales representative or contact FMS Customer Service at 1-888-679-3835 (1-888-OPW-FUEL) for information. Once you have been approved for SSO credentials go to the [FMS Technical Library](#) to find the most recent revisions of all manuals and instructions.



NOTE: All references to other manuals and instructions in this manual can be found in the FMS Technical Library. Make sure you have the most recent revision.

Related Manuals

Other related manuals necessary to install, configure, maintain or use this product:

[M2050 LX 4 Installation Manual](#)

[M2050-PLUS LX Plus Installation Manual](#)

[M2051 LX 4 and LX Plus Configuration Manual](#)

[M2052 LX 4 and LX Plus User Manual](#)

[M2054-QS LX 4 and LX Plus Quick Start](#)

[FMM2058-PLS LX Plus Wiring Diagram](#)

[FMM2058-PG LX Plus Wiring With ProGauge](#)



ProGauge is a part of Dover Fueling Solutions.

Contact

ProGauge

START ITALIANA S.r.l.

Via Natta 6

20823 Lentate Sul Seveso

MB, Italy

Tel. +39 0362 1581465

Fax +39 0362 1581464

Copyright Information

© 2024 Dover Fueling Solutions. All rights reserved. DOVER, the DOVER D Design, DOVER FUELING SOLUTIONS, and other trademarks referenced herein are trademarks of Delaware Capital Formation, Inc./Dover Corporation, Dover Fueling Solutions UK Ltd. and their affiliated entities.

Security Best Practices

To prevent unauthorized access or unwanted intrusions into your system, DFS Information Technology strongly recommends that you obey the Security Best Practices that follow:

- Change the default password **immediately** to enhance security. Default passwords are often easy to guess or widely known, making devices vulnerable to unauthorized access.
- Limit access to the system. Access should only be granted on a need-to-know basis.
- Secure all control systems by minimizing their exposure and ensuring they are not accessible from the internet. This is important to prevent unauthorized access.
- Identify the control system network and relocate devices behind firewalls.
- Isolate the system from the business network to enhance security measures.
- Maximize isolation of the different networks (segmentation) by firewalls, routers, and VPN solutions to largely exclude attack paths to the Industrial Control System network.
- When remote access is required, use secure methods, such as Virtual Private Networks (VPNs) or known secure remote access management tools. Use the latest version of the tools and implement the updates as recommended.

Table of Contents

Section 1 - Preface	8
Section 2 - General Warnings	9
Section 3 - Introduction	11
3.1 Safety Warnings	13
3.2 Information Panels	13
Section 4 - Direct Connection	15
Section 5 - Login Procedure	20
Section 6 - Admin Account	23
6.1 System Settings	24
6.1.1 Site Info	24
6.1.2 System	25
6.1.3 Protocols	27
6.1.4 Tank Group	29
6.1.5 Shifts	30
6.1.6 Fairbanks	31
6.1.7 SMTP	32
6.1.8 Site Mapping (for Reconciliation/Autocalibration mode only)	33
6.1.8.1 Map Dispensers and Nozzles to Tanks	34
6.1.9 Relay Settings	35
6.1.10 IFSF	35
6.1.11 Data Retention	35
6.2 Notifications Menu	36
6.2.1 Contacts	36
6.2.2 Notifications	37
6.3 Tank Setup Menu	38

6.3.1 Settings	38
6.3.2 Thresholds	41
6.3.3 Density	43
6.3.4 AEF (Aqueous Ethanol Float) Thresholds	44
6.3.4.1 For Progauge Probes with AEF	44
6.3.4.2 For OPW 924B Probes with AEF	45
6.3.5 Relays	47
6.3.6 Straptable	48
6.3.7 Leak Test	50
6.3.7.1 Static Leak Test Setup	51
6.3.7.2 CSLD (Continuous Statistical Leak Test) Setup (LX Plus and LX Ultimate Only)	52
6.3.7.3 On-demand Test	53
6.3.8 ACR mode	54
6.3.8.1 ACR Configuration Parameters	54
6.3.8.2 Calibration Parameters	54
6.3.9 ACR Results	55
6.3.10 Reconciliation	56
Section 7 - Sensor Setup	57
7.1 ProGauge Sensors	57
7.1.1 OPW FMS Smart Sensors (LX Plus and LX Ultimate only).	58
7.2 Relays	59
Section 8 - Tank Status	62
Section 9 - Sensor Status	66
Section 10 - Tank Group Status	67
Section 11 - Reports Menu	68
11.1 History	69

11.2 Tank Alarms	70
11.3 Sensor Alarms	70
11.4 Line Alarms (LX Plus and LX Ultimate models only)	71
11.5 Delivery	71
11.6 Tank Leak Tests	72
11.7 CSLD Leak Tests (LX Plus and LX Ultimate Models Only)	73
11.8 Line Leak Tests (LX Plus and LX Ultimate models only)	80
11.9 Compliance	81
11.9.1 Tank Compliance	81
11.9.2 Sensor Compliance Report	82
11.9.3 Line Compliance Report	83
11.10 Sales	83
11.11 Shifts	84
11.12 Reconciliation	84
11.13 Configuration	87
Section 12 - Maintenance	88
12.1 Manuals	88
12.2 Timezone	89
12.3 Network Configuration	89
12.4 Utility	90
12.5 Diagnostic (for LX Plus and LX Ultimate Only)	92
12.6 Communication	92
12.7 Console Settings	93
Section 13 - Change Password	94
Section 14 - Logout	95
Section 15 - Guest Account	96

Section 16 - Technical Support 97

Section 1 - Preface

Start Italiana S.r.l. has made every effort possible to see that this document is complete, accurate and updated. With every revision of the console, the related information is added to the document. Start Italiana S.r.l. reserves the right to make unannounced improvements and/or changes in the product and/or associated programs. Start Italiana S.r.l. is not liable for damages of any kind, including those resulting in the document, including typographical errors.

Making copies, citing quotes or other reproductions of all or part of this document is permitted only after written consent of Start Italiana S.r.l.

Patents protect trademark or name.

Copyright 2022© Start Italiana S.r.l. – All rights reserved

Section 2 - General Warnings

Carefully read the instructions in this manual before you do the installation procedures.

Only approved persons are permitted to install this equipment and configure the console.

The manufacturer is not responsible for operations that are not included in this manual.

The manufacturer is not liable in regard to competent bodies for changes to the equipment and software that are not approved.

In case of failure or defect, refer directly to an authorized service provider or manufacturer.

The manufacturer is not liable for injury and/or damage to persons and/or property and/or pets caused by the failure to obey safety instructions.

All approved personnel must know all safety requirements in this manual, the configuration manual and the user manual.

Refer directly to an approved service provider or manufacturer for questions about the operation of the equipment.



IMPORTANT: You must read and obey all safety instructions in this manual before you use this equipment.



WARNING: Incorrect use of this equipment that does not agree with the instructions in this manual can cause a risk to safety.



WARNING: A minimum insulation thickness of 0.25 mm is necessary for all internal wiring of different intrinsically safe circuits.

A grounding conductor must be connected between the I.S. ground terminals of the Intrinsic safety barrier in the console and the power distribution panel. This connection must have a cross-sectional area of at least 4 mm² for the added earth connection.





WARNING: Substitution of components can decrease intrinsic safety.

ADVESTISEMENT: La substitution des composants peut compromettre la sécurité intrinsèque



READ CAREFULLY: The control drawing shown in ILL. 14 shall be provided with all devices.



IMPORTANT: If a replacement power supply cable is necessary, use an applicable, approved ELBZ/7 type power cord. Do not use another type of power cable.

Section 3 - Introduction

This manual was prepared in accordance with IEC 82079-1 standards. "Preparation of instructions for use - Structuring, content and presentation - Part 1: General principles and detailed requirements and according to the ATEX Directive 2014/34/EU concerning equipment and protective systems intended for use in potentially explosive atmospheres."

This manual gives all necessary information about the configuration of the MagLink LX consoles.

IMPORTANT: This manual must be used together with the related product manuals:



- » M2050 LX 4 / M2050-PLS LX Plus Installation Manual / M2060 LX Ultimate Installation Manual
- » M2052 LX4/Plus/Ultime Operator manual

You must install the console as shown in the M2050 LX 4 / M2050-PLS LX Plus / M2060 LX Ultimate Installation Manual, configure the console as instructed in this manual and use the console in the field as shown in the M2052 LX 4/Plus/Ultime Operator Manual.



WARNING: This device must not be discarded with household waste. This device is labeled in accordance with European Directive 2012/19/UE concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE).

This guideline gives the methods for the return and recycling of used electronic devices as applicable throughout the EU. To return your used device, use the return and collection systems available to you.

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 50°C or incinerate.



The table that follows lists reference data of the manufacturer:

<i>Data</i>	<i>Description</i>
Name	START ITALIANA S.r.l.
Address	Via Natta 6
	20823 Lentate Sul Seveso, (MB)
	Italy
Telephone	+39 0362 1581465
Fax	+39 0362 1581464

<i>Data</i>	<i>Description</i>
Website	www.startitaliana.com
e-Mail	support@startitaliana.it



INFORMATION: The units of measurement contained in this manual refer to a specified selection by the user. Refer to ["System" on page 25](#) for more information on how to set units of measure.

3.1 Safety Warnings

This manual contains many important Safety Alerts. There can be a risk of injury or damage to property if you do not obey these alerts. The panels below show the types of safety warnings that can be seen and how each is specified.



DANGER: Indicates an immediately hazardous condition that, if not prevented, will result in death or serious injury.



WARNING: Indicates a possibly hazardous condition that, if not prevented, could result in death or serious injury.



CAUTION: Indicates a possibly hazardous situation that, if not prevented, could result in minor or moderate injury.



NOTICE: Indicates important information not related to hazards. A condition that, if not prevented, can result in property damage.



SAFETY INSTRUCTIONS: Indicates instructions and procedures related to safety or gives the location of safety equipment

3.2 Information Panels



NOTE: This panel gives more information about an instruction or procedure.



IMPORTANT: This panel contains special information that is important and must be read and obeyed.



REMINDER: This panel shows information that has been given before in the manual that is important to show again.



TIP: A step or procedure that is recommended to make another step or procedure easier.




INFORMATION: This panel shows references to more information in other sources.

Section 4 - Direct Connection

This section covers how to connect directly to the console using a standard RJ45 cable.



NOTE: If you have a connection problem with a standard RJ45, as an option, try an **RJ45 Crossover cable**.

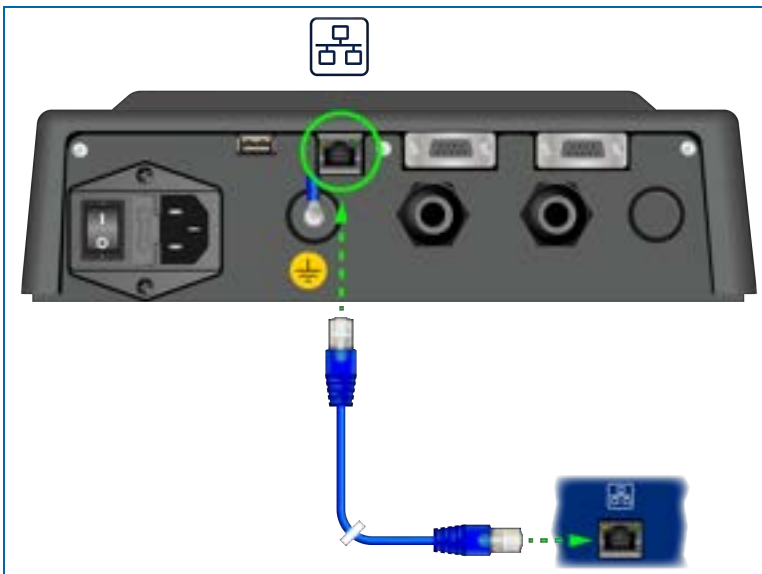


Connect an RJ45 cable from your laptop Ethernet port to the Ethernet port on the bottom panel of the console.


Navigate to Control Panel > All Control Panel Items > Network and Sharing Center on your laptop.



1. Click **Change adapter settings** in the left-side panel.

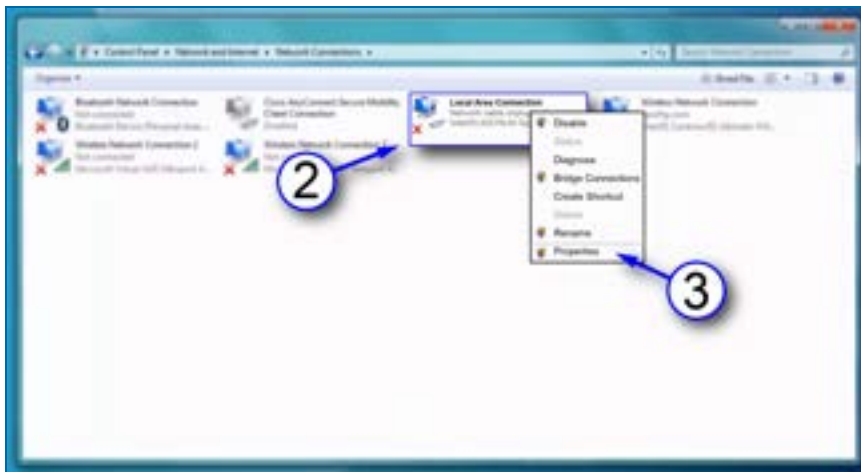

2. Right-click **Local Area Connections**.
3. Select **Properties** from the menu.

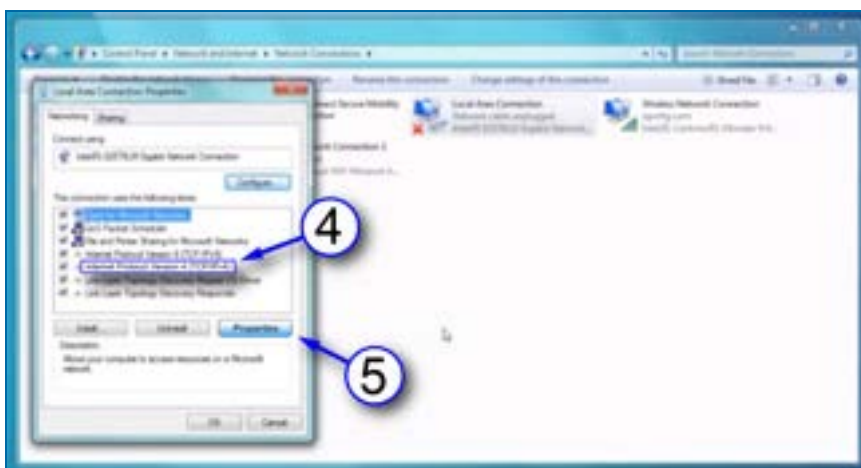

4. Select to highlight **Internet Protocol version 4 (IPv4)** on the list in the pop-up.
5. Click **Properties**.



6. Set the **IP address**. The unit comes shipped from the factory with the IP address 10.90.10.92. Your laptop must be set one number higher or one number lower to connect to the console. The connection must be made on port 3000.
 - a. Click the button next to **Use the following IP address**.
 - b. Enter the IP address: **10.90.10.91**.
 - c. Enter the Subnet mask: **255.255.255.0**.
7. Click **OK**.

Your laptop is now set up to communicate directly with your MagLink LX 4 console. Enter the IP address into your browser to connect (e.g. e.g <https://10.90.10.92:3000>).




NOTE: The software versions 4.19.9 or higher support the https protocol which includes a self-signed certificate for enhanced web browser security.

To establish connection with the console, on the web browser url bar you must type **<https://10.90.10.92:3000>**.



IMPORTANT: If you attempt to use the older http, it will result in an error and the connection will not be established.

Once you establish connection, the web browser will show an alert that indicates the connection is not secure. See the example below on Google Chrome web browser. Similar screens will appear on other web browsers.

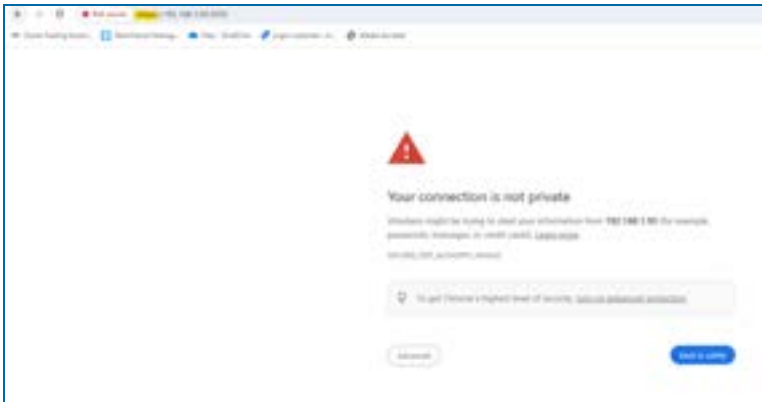

This is normal and expected since the console is not always connected to the internet and a certificate from an appropriate authority cannot be provided.

The connection is still secure and this alert will can be ignored.

To continue, click the **Advanced** button as shown in the lower left of the screen above. The screen shown below will come into view.



Click **Proceed to 192.168.1.93 (unsafe).**

The "Login" screen will come up (see the image below).



Section 5 - Login Procedure

The Home Screen shown below will come into view after you enter the IP Address into your browser.



Under **Language selection**, select the radio button adjacent to the language that will be used for the configuration.

The table that follows shows the languages that can be selected:

<i>Console Language Selections</i>		
Chinese Simplified	Chinese Traditional	English
French	German	Italian
Polish	Portuguese	Spanish
Hungarian (Magyar)		

Push the **Enter** button. The Login page will come into view.



1. Select a **User** type from the drop-down. There are three (3) types of Users:

- **Guest:** Can only see Tank Status, Sensor Status and Reports (measures, deliveries, leakages, sudden loss). A Guest User cannot make changes to the configuration. The Guest Password is **GUEST-LX4**.
- **Admin:** Has the same rights as Guest and can also make changes to the configuration. The Admin Password is **ADMIN-LX4**.
- **Technician:** The Technician account can see the configuration but cannot make changes. The Technician account has access to advanced CSLD reports (Daily, Diagnostics, Segments). The Technician password is **TECHNICIAN-LX4**.
- **SuperAdmin:** This is for internal use only.

2. Enter the **Password**.



NOTE: The initial password for a Guest user and Admin User can be found on the M2054-QS Quick Start instruction that is in the box that came with your console. These passwords are case-sensitive. Only an Admin user can change passwords.



IMPORTANT: The administrator must change the password as soon as possible to prevent access by personnel that are not approved. See ["Change Password" on page 94](#) for information.



TIP: As you type your password only neutral "bullet" characters will show (e.g. •••••). Select the "eye" icon  to show the password characters as you type.

3. Push the LOGIN button to log in to the console with the selected user type.
4. If you did not select the applicable language in the Home screen you can push the LANGUAGE button to go back to the Home screen.

The table that follows shows the types of data that can be seen by the two User types:

<i>Data Type</i>	<i>Guest</i>	<i>Admin</i>
Inventory	X	X
Historical Data Table	X	X
Alarm status	X	X
Delivery/Leakage	X	X
Login	X	X
Logout	X	X
Association of alarm to relays (per tank)		X

<i>Data Type</i>	<i>Guest</i>	<i>Admin</i>
Managing internal and external sensors		X
Automatic print features		X
Managing strapping tables		X
Configuring email address book		X
Configuration of all dispensers		X
TCP/IP address configuration, DNS		X
Utility operations (Backup/restore, Clean historical data: Historical readings, alarms, reconciliation, shift reports, Touch screen calibration of the console; Restarting the console, Restarting the operating system of the console)		X
Reconciliation (if enabled)		X
Shift report with scheduling		X
Sensors current status	X	X
Autocalibration Analysis		X
Tanks, sensors, Line leak setup		X

Section 6 - Admin Account



1. When an Admin User is logged in, the screen will show a *Main Menu* on the right side of the display.
2. When a **menu item** is selected, its related *tabs* will come into view along the top of the display (the selected menu item will be highlighted by a blue background).
3. When a **Tab** is selected in the *Tabs Bar* it is highlighted by a yellow line.
4. When an entry in a tab has a *character limit* it is shown as "number of characters entered / character limit" to the right of its entry line.
5. Each tab has a **SAVE** button that is used to save that tab's configuration data after it is entered.




IMPORTANT: Make sure you save the configuration data that you entered before you continue to another tab.

6. When all applicable tabs have been configured you can click the **APPLY SETTINGS TO CONSOLE** button to save all of the configuration data to the console.



TIP: It is recommended to start from the Site Info tab and complete all applicable fields. Then, continue to the next tab to the right and complete all applicable fields. Continue this procedure until you have completed all tabs.

6.1 System Settings

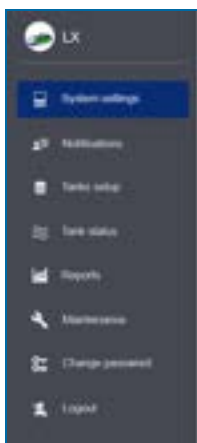

6.1.1 Site Info

Enter the applicable information into the fields and make the correct selections as shown in the table that follows:

Field	Description
Name	The name of your site or station.*
Console serial	Enter your console's serial number. This field is read-only. Only a superuser can change it.
Total Tanks	This field shows the number of probes connected to the console. Enter 1-32*
Total external relays	This field shows the number of external output relays connected to the console. Enter 1-32*
Total dispensers	This <i>read-only</i> field shows the number of pumps configured for reconciliation/autocalibration.

Field	Description
Total sensors	This field shows the number of environmental sensors configured in the console.
Detect Button	For model LX Plus and LX Ultimate only. This will start an auto-detect for 924B probes, DMP 1-wire probes and Smart Sensors with the iSIM module. Devices found during auto-detection will show in the drop-down list.
Total OM4 Relays	For model LX Plus and LX Ultimate only. If OM4 module(s) are connected to the console, select the total number of relays. Each OM4 module has four (4) relays. Example: If only one OM4 is connected, select 4. If two OM4 modules are connected, select 8.


*Fields marked with an asterisk are mandatory.

Click **Save**. A confirmation message will come into view.



Select **CLOSE**.



6.1.2 System

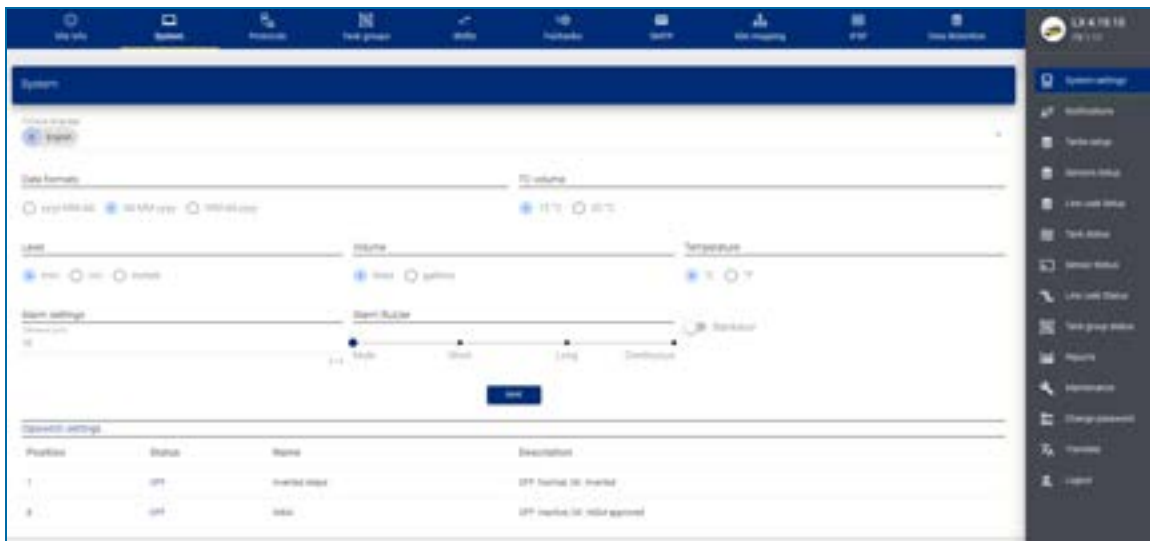

NOTE: All fields have selections (but not Alarm settings/Tolerance & Leak threshold) with default values. Changes to level and/or volume unit and number of decimals can automatically change with the selection.



NOTE: Blankdoor Slider Button: This control removes the visual display. This is used when the user wants to set the console to a blank screen. In blankdoor mode, the alarms can only be acknowledged through the Web User Interface.

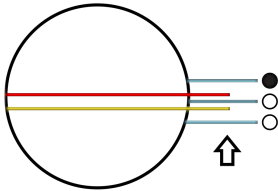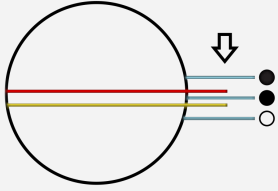Field	Description
Console language	Select the language for the graphical user interface .
Date formats	Date format used in the console
TC vol (°C)	Select the temperature used for the temperature compensated volume calculations
Level	Measurement units of the product and water height
Volume	Measurement units of the product and water volume
Alarm Settings	<p>The alarm hysteresis text box is used ONLY in when there is NO alarm. This is used when there is turbulence in the tank. This is important for relay management. In the examples below, Hysteresis is the value interval between the yellow and red lines. Recommended setting: 10 mm</p> <div>  <p>STARTING FROM NO ALARM STATUS</p> <p>Relay 1 is linked to H₂O Alarm</p> <ul style="list-style-type: none"> H₂O ≤ H₂O Alarm Threshold - Hysteresis Value → Alarm OFF ○ H₂O ≤ H₂O Alarm Threshold → Alarm OFF ○ H₂O > H₂O Alarm Threshold → Alarm ON ● </div> <div>  <p>STARTING FROM ALARM STATUS</p> <p>Relay 1 is linked to H₂O Alarm</p> <ul style="list-style-type: none"> H₂O > H₂O Alarm Threshold → Alarm ON ● H₂O > H₂O Alarm Threshold - Hysteresis Value AND H₂O < H₂O Alarm Threshold → Alarm ON ● H₂O < H₂O Alarm Threshold - Hysteresis Value → Alarm OFF ○ </div>
Temperature	Measurement units of the temperature of the product.

Field	Description
Alarm Buzzer	Continuous: The buzzer will operate continuously and will stop when the alarm is cleared or acknowledged.
	Long: The buzzer will operate for 3 minutes. It will stop automatically.
	Short: The buzzer will operate for 30 seconds. It will stop automatically.
	Mute: The buzzer will not operate.

The Dip-switch Settings field shows the function of the dip-switches.



NOTE: The STATUS field is for future use and can be ignored at this time.




NOTE: Position 2 is only shown in the LX4 and is not shown in the LX Plus/Ultimate consoles (LX Plus/Ultimate does not support internal inputs).

Click **Save** when you complete the *System* tab configuration.

The system will also show the status of the Dip-switches 1 & 2.

6.1.3 Protocols

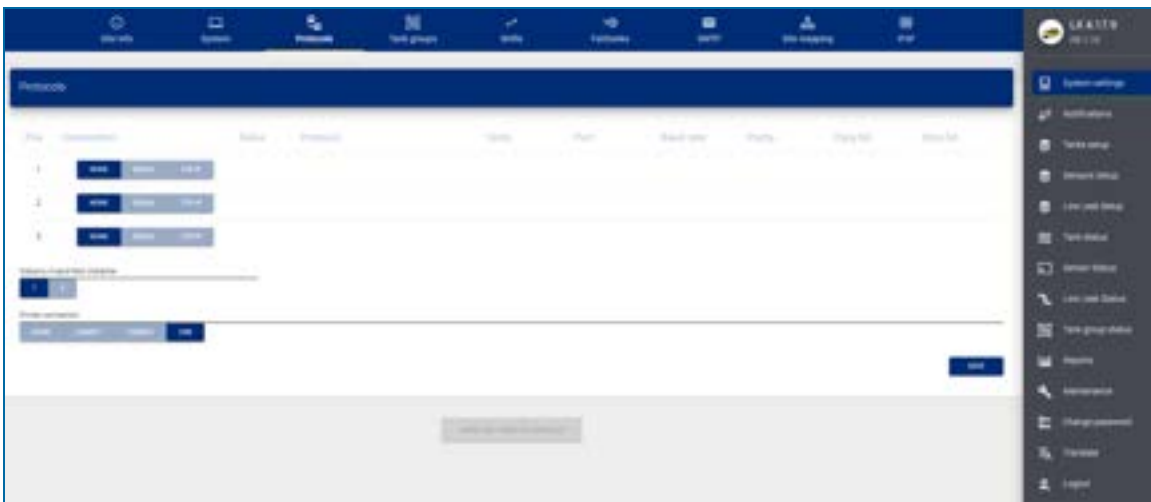

This section specifies the protocol to use to communicate with a POS (point of sale) system or a FCC (forecourt controller system).

Field	Description
Connection	<p>Select the type of connection:</p> <ul style="list-style-type: none"> » None: If no device communicates with the console. » Serial: If a serial RS232 connection is made between the POS/FCC and the console. » TCP/IP: If a TCP-IP connection is made between the POS/FCC and the console.
Sales	Click YES if the POS/FCC will transmit the dispenser sales transactions to the console. The Gilbarco BCD protocol is supported for this function. Note, that only one connection at a time can support the sales transactions.
Protocol	<p>Select one of the three:</p> <ul style="list-style-type: none"> » Gilbarco: To permit the GVR TLS350 protocol commands. If the "i" button that comes into view is selected when a Gilbarco POS connection has been mapped, the supported VeederRoot commands will be shown. » DOMS OPC: To permit the DOMS OPC protocol commands. » PV4: To permit the OPW PV4 protocol commands. » Probe Emulation: Emulation of the "M" command of the Progaug probe (the console responds to the M command). This protocol can be used by forecourt controllers that support the Progaug probe M command and need to get information on the product height, water height and product temperature only.
Port	<ul style="list-style-type: none"> » If serial communication was selected above, select which serial port will be used (COM1 or COM2). » If TCP-IP communication was selected above, configure the TCP-IP port that to be used.
Baud rate / Parity / Data bits / Stop bits	These fields are in operation if serial communication has been selected. Configure the settings for the serial ports.
TSG DCD Overfill Alarm	If this control is enabled, when a High High Product alarm is caused, the console will send an Overfill alarm in the POS communication.
Printer Connection	<p>Select:</p> <ul style="list-style-type: none"> » None: If no printer is connected » USB: If a printer is connected through the USB port. » COM1/COM2: If a printer is connected to the serial port (baud rate for the printer should be set to 9600 bps). Note that this is necessary for the fields to become available if the serial ports have not been configured for POS/FCC communication.
Gilbarco Invalid Field Character	Select the symbol ("?" or "0") to use in the VeederRoot protocol commands for invalid fields. The default is "?".

Click **Save** and **Apply settings to console** when you complete the *Protocols* tab configuration.

6.1.4 Tank Group




NOTE: The number of tanks are configured in the Site Info tab. Tank parameters are configured in Tanks setup from the Main Menu.

This tab is used to make Siphon (Manifold) groups.



IMPORTANT: Tanks in a Siphon (Manifold) group must contain the same product.

There are two (2) panels to configure in the "Tank Group" screen.

- In the top panel:
 - Enter a **Name** for the Tank Group.
 - Select a **Product Family** from the drop-down for this Tank Group. The tanks that contain the selected product family will automatically come into view under *Available Tanks*.
 - Click the **Save New** button.
- In the bottom panel:
 - Add the applicable tanks to the Tank Group
 - Set the Manifold type: Select the **Siphon** option. The other options are not active at this time.
 - Click the **Save**  icon on the right side of the panel.
 - Click **Apply settings to console** to complete the procedure.


To delete a group, click the **Delete**  icon on the right side of the panel.

6.1.5 Shifts

The "Shifts" screen is used to configure shift reports. A shift report shows the tank contents at the beginning and end of the shift. The shift report is made in another menu.

Configure the **Closing Time** for up to four shifts (use the drop-down lists).

End of Day: Used for the reconciliation report (when the day ends from a reconciliation perspective).

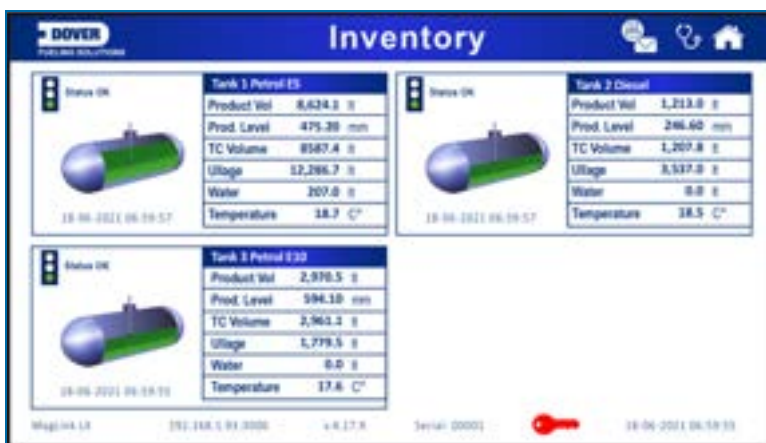

When the site is Closed, a red key icon will show at the bottom of the Graphical User Interface (see the illustration above).

When complete, click the **Save Shift Schedule** button. Click **Apply Settings to Console** to complete the procedure.

Open/Close site: This will be applicable to future releases. This functionality has not been implemented at this time. This will be used to enter specified site open and close times. After the site close time, the tank can be monitored for a theft (sudden loss) event. This is applicable to tanks in Standard mode only.

6.1.6 Fairbanks



The console can send information to a Fairbanks server through FTP if applicable. This information includes:

- Inventory stock levels
- Deliveries
- Alarms
- Pump transactions (if connected to a POS/FCC that uses the Gilbarco BCD protocol).

Field	Description
Server	The IP address of the server that will receive the files (given by the server administrator).
Folder	The folder in the server where the files are to be sent, provided by the server administrator (optional, can be left blank)
User	User name provided by the server administrator
Password	Password provided by the server administrator
ID	Console identifier. If set to 0, the FTP transfer gets disabled.
Port	FTP port, provided by the server administrator
Interval	How often the console will attempt to establish connection to the server in order to send the files
Transfer mode	Active or Passive, info provided by the server administrator.
Enable SFTP	For SFTP connections

Click **Save** when you complete the *Fairbanks* tab configuration.

6.1.7 SMTP



The console can send email notifications related to tank information, tank events and console events.

Configure the SMTP connection parameters in this page. Notifications and email recipients are configured under ["Notifications Menu" on page 36](#).

Field	Description
Server	The email server that handles the email functionality
Sender	Email of the sender
User	Username provided by the mail Server
Password	Password provided by the mail Server
Port	SMTP port, provided by the mail Server
Enable SSL	Activate it for SSL connections.

Use the TEST button to send a test email to a specified recipient.



REMINDER: The recipient must first be configured under ["Contacts" on page 36](#).

Click **Save** when you complete the *SMTP* tab configuration.

NOTE: Note on SMTP ports: The SMTP server that is used for email sent from the Maglink console can be configured with the applicable server address / user account / password. Selected one of the available options:

» Port 587, ssl enabled - This is used worldwide by SMTP providers as the default and is the best option (email transfer is encrypted).




» Port 25, ssl enabled - Not every SMTP provider supports this option, (email transfer is encrypted).

» Port 25, ssl disabled - This is used by many SMTP providers as a legacy compatible option but it is less secure (email transfer is unencrypted). Use this option only if no other option is available.

» Port 465 - Do not use this port. It is not supported by the Maglink console.

It is recommended to use Port 587 as your first selection. If it is not supported by the SMTP provider then use port 25.

6.1.8 Site Mapping (for Reconciliation/Autocalibration mode only)

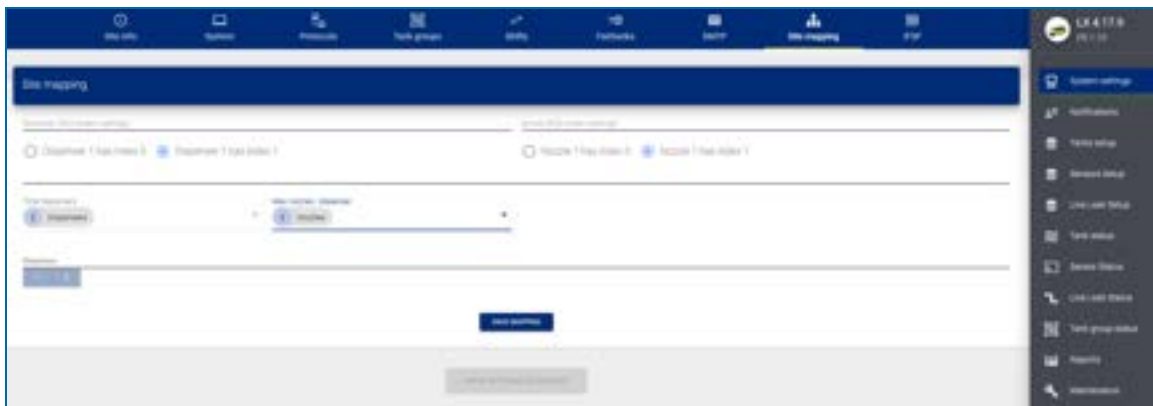

A POS/FCC that uses the Gilbarco BCD Dispenser Interface Protocol must be used to communicate pump sales. Configure the tank-to-nozzle mapping on this tab.

Field	Description
Dispenser (POS system settings)	<p>This field identifies the index of the first pump (refer to the Gilbarco BCD Dispenser Interface Protocol).</p> <p>Select Index 0 if the first pump in the POS/FCC is identified as Pump 0.</p> <p>Select Index 1 if the first pump in the POS/FCC is identified as Pump 1.</p> <p>The word "Pump" refers to the Fueling Position as shown in the Gilbarco BCD Dispenser Interface Protocol.</p>

Field	Description
Nozzle (POS system settings)	<p>This field identifies the index of the first nozzle of the pump (refer to the Gilbarco BCD Dispenser Interface Protocol).</p> <p>Select Index 0 if the first nozzle in the POS/FCC is identified as Nozzle 0.</p> <p>Select Index 1 if the first nozzle in the POS/FCC is identified as Nozzle 1.</p> <p>The word "Nozzle" refers to the Meter Identifier as shown in the Gilbarco BCD Dispenser Interface Protocol.</p>
Total dispensers	Identifies the total number of pumps (Fueling Positions) that are connected to the tanks monitored by the console
Max nozzles	Identifies the maximum number of nozzles for each pump.

Click **Save** when you complete the top section of the *Site mapping* tab configuration.

6.1.8.1 Map Dispensers and Nozzles to Tanks

1. Select a **Dispenser**.
2. Map each **Nozzle** to a Tank.
3. The offset is the "meter drift" value of the dispenser (the meter drift is set during a pump calibration).
4. Use the slider button to Enable the Nozzle to Tank mapping.



IMPORTANT: Nozzle-to-tank mapping must be done correctly or the console will communicate incorrect sales data for the tanks and the autocalibration / reconciliation function will not operate correctly.



NOTE: When manifolded tanks are in use, the first tank in the Manifold Group should be mapped to the related nozzles. The reconciliation reports and the delivery reports for the full manifold Group will be shown under the 1st tank.

Autocalibration cannot be performed in a tank that is part of a Manifold Group.

Click the **Save Mapping** button at the bottom of the panel to save the configuration.

6.1.9 Relay Settings



Turn off position only at the end of the event: When this slider button is active, the relay will deactivate only when the alarm has been cleared (the event that caused the relay to activate has ended). If this control is not active, the relay will deactivate when the alarm has been acknowledged.

Inverted relays: When this slider button is active, it energizes the relay under normal conditions and keeps the NC contact open. In an alarm condition, the NC contact of the relay closes to activate the circuit.

6.1.10 IFSF

This is not in use at this time. Ignore this section. For IFSF connections, the external IFSF module must be used.

6.1.11 Data Retention



Execution time: Set the time when the console will automatically do a check each day to update old data. If set to 0, the functionality is disabled.

In the other two fields, the user can configure how long the console stores ACR, Compliance and other data.


ACR/Compliance data: Daily reconciliation, hourly reconciliation, tank leaks, line leaks, LLD alarms, sensor alarms, tank alarms, straptables.

Others: deliveries, measurements, sales, shifts, CSLD diagnostics, spoolers.



6.2 Notifications Menu

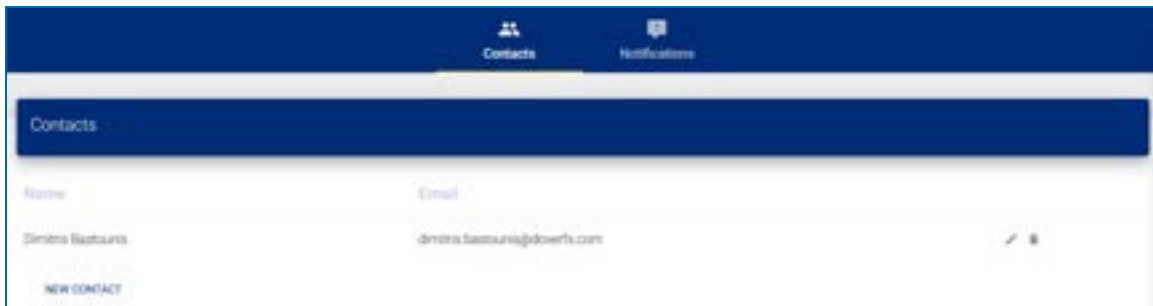

6.2.1 Contacts



When the contacts tab is selected, all contacts that have been entered can be seen.

Click the **Edit** icon  to change information for a contact. Click the Delete icon  to remove a contact.

Click **NEW CONTACT** to configure notification information for a new contact name. The New Contact window will come into view.

A screenshot of the 'New contact' form. It has a title 'New contact' at the top. Below are two input fields: 'Name' with the value 'Dimitris Bastounis' and 'Email' with the value 'dimitris.bastounis@doverfs.com'. There is a character count '18 / 30' below the name field. At the bottom right are 'CANCEL' and 'SAVE' buttons.

Complete the fields:

- Name
- Email: To receive notifications by email

Click **Save** when you complete the *New Contact* configuration.

6.2.2 Notifications


Set up the contact name(s) and notification type for each of the Notification Events.

Field	Alarm Description
Tank alarm	High-high product, High product, Low product, Low-low product, Water
Delivery	End of delivery report
Tank Leak	Leak detected in the tank
Current Inventory	A current inventory report can be started from the Graphical User Interface (GUI) to be printed or to be emailed. For the report to be emailed, select the recipients here.
Shift	Shift report
Sudden Loss	Sudden loss alarm. The volume has dropped over the configured threshold when the site is closed. NOTE: This requires the site to be closed.
Sensor	Sensor Al;arm

Field	Alarm Description
Line Alarm	Alarms related to the operation of the PLLD: plld sensor no link, no STP link (no link with LIM), plld sensor open (no reading), plld sensor short (wrong polarity), STP controller (STP contactor fused or damaged), Line leak, No leak test, No annual leak test, Pressure low.
Line Leak	An alarm related to a PLLD test that failed.
Sensor Status	A report that shows the current status of all sensors
Compliance Report	A report with tank leak tests, line leak tests and sensor activation history that is started and emailed from the display. Select the email recipients here.

Click **Save** when you complete the *Notifications* tab configuration.

6.3 Tank Setup Menu

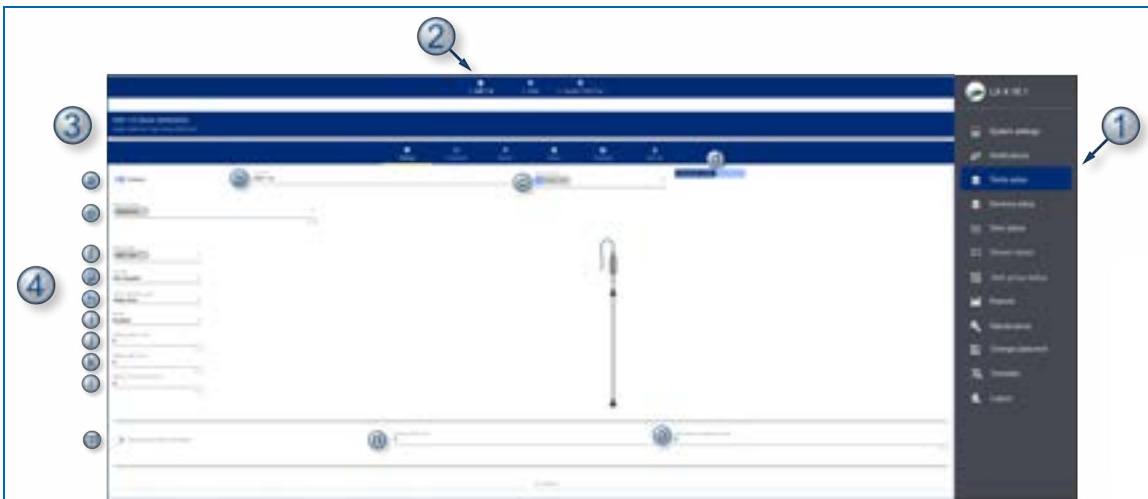

1. Select **Tank setup** from the Main Menu. The number of Tanks configured in ["Site Info" on page 24](#) will show in the Tabs bar.
2. Select a Tank to configure.
3. An information bar below the tabs bar will show the **Height** and **Max Volume** of the selected tank. This is read-only data from the last line of the tank strapping table (["Straptable" on page 48](#)).

6.3.1 Settings



NOTE: If the tank does not do autocalibration / reconciliation, then select the Standard mode button and configure as below.

4. The bar below the information bar shows the configuration parameter selections. **Settings** is the first selection.

- a. Move the **Enabled** slider button to ON to let the application query the installed probe during the read cycle. A probe query does not occur if this button is OFF.
- b. **Description:** Enter a description of the tank.
- c. Select the **product type** from the *Product family* drop-down.
- d. Select a button for **Standard** or **ACR** Mode (to turn on the ACR function).
- e. **Serial Number:** 924B and DMP 1-Wire probes that are connected through the ISB (LX Plus and Ultimate models only) are automatically recognized once they have been detected.
 - If the console is an LX Plus or LX Ultimate model, the probes that were connected to the ISB and detected in the System Settings/Info menu will show here.
 - If the console is an LX4 model, the probe serial number must be entered manually.



NOTE: When a serial number is entered manually, a “QUERY” button will come into view. When the “QUERY” button is selected, the console will try to communicate with the probe to get information on the probe type (e.g 924B, DMP-IS 1-Wire, DMP-IS RS485, XMT-SI-485 etc) and the number of floats that are detected on the probe.

- f. **Probe type:** If the console can successfully communicate with the probe to get its configuration, this field will populate automatically.
 - DMP-485: DMP-IS probe connected through RS485.



NOTE: With this selection the console thinks that the probe has 5 temperature sensors and the applicable tank leak detection settings are automatically detected.

DMP 1-WIRE: DMP-IS probe with 1-wire protocol connected on the ISB.



NOTE: With this selection the console thinks that the probe has 5 temperature sensors and the applicable tank leak detection settings are automatically detected.

- DMP FLEX: DMP flexible probe connected via RS485.
- DMP FLEX 1-wire: DMP flexible probe with 1-wire protocol connected on the ISB.
- XMT-SI-485: XMT-SI-485 probe connected through RS485.
- XMT-SI-RF: XMT-SI wireless probe connected through an RS485 RF Receiver.
- XMT-EXd: XMT explosion proof probe connected through RS485.

- OPW 924B: OPW 924B with 5 temperature sensors.
 - OPW 924A: Previous generation OPW 924A probe with 5 temperature sensors.
 - VSmart analog: For OPW 7100V flexible probes that connect through the Vsmart module.
 - Radar LR120: For Siemens Radar transmitter LR120 (see Appendix in this manual for the setup).
- g. **Density:** Select *Densimeter* if a density measurement float is installed on the probe (applicable to DMP probes only).

NOTE: For DMP 1-wire probes (LX Plus/Ultimate models only):



For console software versions earlier than 4.17.9 in combination with DMP probes with firmware version older than v08, the probe needs to be configured firstly via RS485 (with the dedicated DMP Probe Config Manager) in order to use the densimeter.

For console software version 4.17.9 and later in combination with DMP firmware version v08 and later, there is no need for the above requirement and the console can push the configuration to the probe.




NOTE: For DMP RS485 probes: The density configuration for DMP 485 probes can be pushed to the probe by the console.

- h. Select the **Water detection type** from the drop-down:
- **Not installed:** Water float is not installed on the probe
 - **Water float:** Water float is installed on the probe
 - **AEF:** Aqueous Ethanol Float installed in the place of the standard water float.
- i. Select the status of **Water** detection from the drop-down:
- **Enabled:** The water float is present and measurements will be available and taken into processes (this setting will send the “two floats” information to DMP Probe)
 - **Ignored:** The water float is installed but no measurements are processed,, Water values are shown as “0”.
 - **Ignored during delivery:** The water float is present and measurements will be available and taken into processes. However, when the delivery is detected, the last measurements will be locked and shown to not cause false alarms during delivery. Once the delivery has completed, the water measurements will be unlocked.
- j. **Offset product:** This value is used to calibrate the position of the product float. Possible value range: ±5000 mm (197 in).

- k. **Offset water:** This value is used to calibrate the water float Possible value range: ± 5000 mm (197 in).
- l. **Water Min Float Level:** This is the threshold to set the water volume at zero and show the water level.
 - If “Water level from probe + water offset” > Water Min Float level, the Water volume *and* Water level will be shown.
 - If “Water level from probe + water offset” < Water Min Float level, the Water volume will not be shown but the Water level will be shown.
- m. Move the **Fast delivery QACR** slider button to the right (to the enabled position) to let the application use the QACR algorithm for the delivery detection. Set the delivery time (in minutes). The QACR algorithm is the delivery algorithm that is usually used when the tank is in ACR mode. For some situations where a tank is in Standard mode and the site would like to have the delivery report as quickly as possible, the QACR algorithm can be used.
- n. Enter the **Delivery time** in minutes: Set the delivery time to tell the console how much time to wait from the moment the delivery detection has ended before the final delivery report is printed. This delivery time is used to permit time for the turbulence within the tank to settle and to have a stable level.
- o. Enter the amount (in liters) to **Start delivery detection**: Set the Delivery start threshold to tell the console when to know when a delivery has started (for example if set at 300 liters, this means that as soon as there is a 300 liter volume increase, then this is a delivery start point).

Click **Save** when you complete the *Settings* configuration.

6.3.2 Thresholds

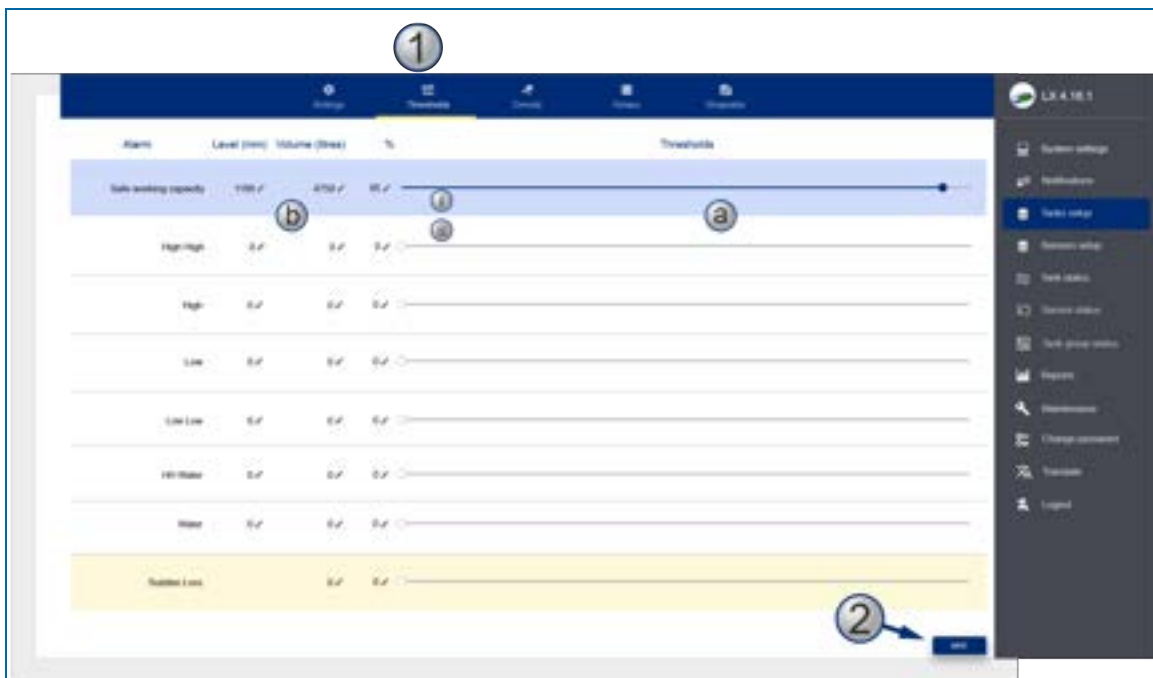

1. Select **Thresholds** from the configurations parameters. Use one of two methods to adjust each of the parameter values:
 - a. Move the slider until you get the correct values.
 - i. The slider for **Safe working capacity** adjusts by **%**. The Level and Volume values will adjust automatically.
 - ii. The slider for all other parameters adjusts by **Level**. The Volume and % values will adjust automatically.
 - b. Click the **Edit** icon (✎) for one of the values. Enter the correct value in the pop-up. Click **OK** to save the value. The other values for that parameter will adjust automatically.
2. Click **Save** when you complete the *Thresholds* configuration.



NOTE: From the top Threshold down, each of the Threshold value sets (Level, Volume and %) must be lower than the one above it. For example, the Low Threshold must have lower values than the High Threshold. If the values are not set correctly, the SAVE button will not be on.

6.3.3 Density

DMP 1-W (Serial 0000034502)
Height (1000) mm - Max volume (3000) litres

Settings Tank Setup Menu **Density** History Diagnostics Leak test ACP mode ACP results Recalibration

Fuel type and density value

Product family: Diesel B100 Product density TC (API - kg/m3): 845 Tolerance of gravity (%): 50

Density Thresholds Enabled: Low density threshold (kg/m3): 780 High density threshold (kg/m3): 900

Current density values

Density (TC density) (API - kg/m3): 836.8 (845) Temperature (°C): 26.6

Coefficient settings

Coefficient A: -209.958 Coefficient B: 2442.793

Density (hydrometer): 847.04 TC Density (hydrometer): 851.13

Configure a probe with an installed density float in this screen. The parameters that show in the illustration above are only available when the **DMP Density** Probe type is selected in ["Tank Setup Menu" on page 38](#) > ["Settings" on page 38](#).

1. Select **Density** from the configurations parameters. The **Product family** and the **Product density TC** are shown.
2. Enter the **Tolerance**. Accepted values are between 1-100. This is used to set the accepted tolerance of measured density. Whenever the measurement is outside of this tolerance, the system will use the default Product density TC value for all calculations. The default value is 20%.
3. **Density Thresholds Enabled**: When this slider button is in the active position, thresholds for density alarms are enabled.
4. **Current Density Values**: The density values as read by the sensor.
 - **Density**: This is the density value at ambient temperature
 - **TC density**: This is the density value compensated at reference temperature.
 - **Temperature**: This is the current temperature of the product
5. The **Coefficients settings** are values that are given with the density sensor.
 - a. Enter the Coefficient A (negative) and Coefficient B (positive) values in the fields.
 - b. Click **Save** after you enter the values.
6. **Density (hydrometer) / TC Density (hydrometer)**: If the density of the product can be measured with a 3rd party instrument such as a hydrometer, then the density value as measured by the instrument can be used to calibrate the density sensor. Use either of the two values to calibrate the density sensor (the system will automatically change the B value to adapt to the manually entered hydrometer density).



For all other probes types, enter the product density at the reference temperature. Values are permitted in API format or in Kg/m3 format.

6.3.4 AEF (Aqueous Ethanol Float) Thresholds

When an AEF is selected in the Water detection type, the AEF thresholds screen will show as a separate tab.



NOTE: The water height will not be shown if the Delivery status is “In progress”. During a delivery, the AEF reading is discarded and alarms will not occur to avoid incorrect measurements.

6.3.4.1 For Progauging Probes with AEF

The AEF in a Progauging probe measures very precise water levels at the bottom of the tank. The setup screen is shown in the image below:



Four (4) thresholds will show that will must be calculated. The current AEF reading value is used by the console to automatically make these calculations.

- T2: AEF position in normal product
- t2: AEF position when lift begins in ethanol (phase separation has started)
- t1: AEF position when lift begins in water (water starts to collect)

- T1: AEF position in water (water has collected)

Do the steps that follow to let the console calculate the thresholds:

1. Install the AEF on the probe and put the probe in a vertical position. Attach the AEF so that the moving element hangs down at approximately 5 mm above the black retaining ring at the bottom of the probe (see the illustration below).



2. With the AEF in this position, push the **Apply Dry Reading (T0)** button. This will automatically calculate all thresholds.

The alarms will be set as follows:

- When the water level measured by the AEF is between the t2 and t1 threshold, an ETHANOL alarm is caused.
- When the water level measured by the AEF is greater than the t1 threshold, then a WATER alarm is caused.

6.3.4.2 For OPW 924B Probes with AEF

The OPW-FMS AEF on a 924B probe measures the density at the bottom of the tank. The setup screen is shown in the image below:



1. The coefficients A, B must be configured. These coefficients are engraved on the float body and can also be found on a label that is included the packaging of the AEF. Enter the **A & B Coefficients** into the fields.
2. Two alarm thresholds are used:
 - t2 Ethanol alarm threshod and t1 Water alarm threshold.
 - The system recommends default values for these thresholds however, the user can overwrite them.
3. Click **Save** when you complete the configuration.

6.3.5 Relays

The screenshot above shows the menu for an LX Plus/Ultimate that has eight (8) external relays and four (4) OM4 relays configured at the System Settings/Site Info menu.



NOTE: The same menu in a LX4 console would show only the four (4) Internal Relays as it does not support the external OM4.

The relays of the console can be configured in this screen.



NOTE: The External Relays and OM4 relays (LX Plus and LX Ultimate models only) that show must first be set up in ["Site Info" on page 24](#).

The available alarms/actions that can be linked to a relay:

- | | | | |
|-------------------|-----------|----------------|---------------|
| » Disabled | » Low | » High/High | » Water |
| » No Link | » Low/Low | » Ethanol | » High |
| » Probe Error | » Leak | » No Leak Test | » Sudden Loss |
| » High/High Water | | | |

Click **Save** when you complete the *Relays* configuration.

6.3.6 Straptable



The Strapping table shows the related mm / litre value of the Tank Volume.

You can enter a Strapping table in one of the methods that follow:

1. You can import a table from a csv or txt file. You must configure the import parameters:
 - a. Level units
 - b. Volume units
 - c. The Field separator




IMPORTANT: The Field separator for a tank table/strapping chart from a 3D Laser **MUST** be set as a semicolon (;).

Select a file from the attachment list.

2. You can copy a strapping table from a different tank. Click the **Copy from tank** button and select an available strapping table from the list that comes into view.

When a strapping table upload is complete, the strapping points (Index) can be seen in the table at the bottom of the screen. Use the scroll bar to see more points


A selected strapping table can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

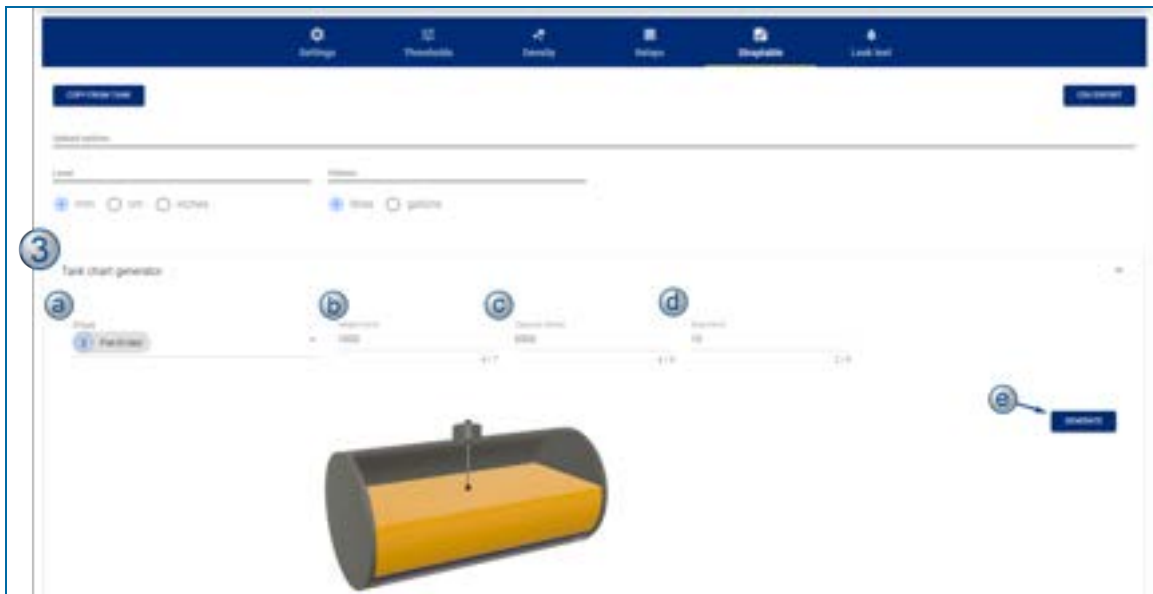

3. You can use the *tank generator* function of the console.
 - a. Select the tank shape from the drop-down list (Vertical, Flat ended, Cylindrical, Dished-Ellipsoidal).
 - b. Enter the tank **Height** (in mm).
 - c. Enter the tank **Capacity** (in litres).
 - d. Enter the number of **Steps** for the chart to be divided into.
 - e. Select the **Generate** button.

The bottom of the screen shows the volume to height graph and the volume distribution (liters per unit of height). See the screenshots below:



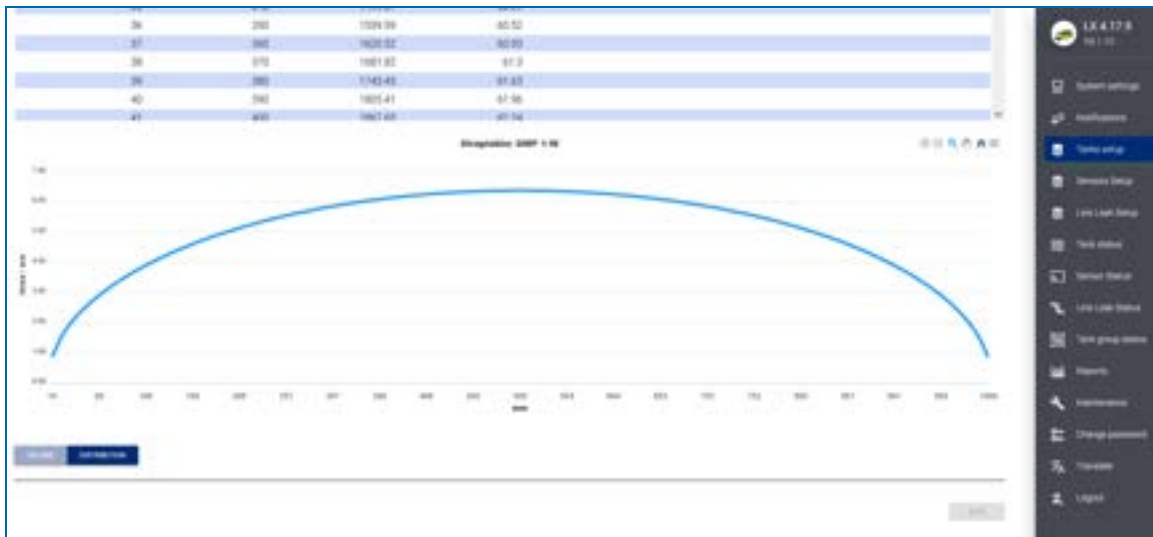

6.3.7 Leak Test

The console can run a leak test in two primary modes:

- **Static test:** In this mode, the tank must be stopped during the full test. No dispensing and no pump sales can be done during the test. The type of probe installed will make the decision if the static test will run at a leak rate of 0.1 gph, 0.2 gph or higher.

There are three (3) procedures for static leak tests:

- **Automatic test:** In this mode, the user can program the test frequency and the console will automatically try to run a test at the specified frequency.
- **Scheduled test:** The user can program the test to start at a specified date and time.
- **On demand:** The user can select to start the test immediately.

On a web browser, the user can configure the automatic and scheduled leak test. The On-demand test can be started through the web browser Tank Status menu or through the Graphical User Interface.

The console will start the test if the applicable parameters are correct (i.e a stable level in the tank and 8 hrs after the last fuel delivery). Activity in the tank such as a pump sale or a fuel delivery will automatically stop the test.

The algorithm compares the temperature compensated volume between the start and end of the test period. External causes can affect the test results (such as ground vibration, extreme winds that cause excessive evaporation, probe failure or a sticky float, incorrect tank charts).



NOTE: OPW 924B probes and ProGauge DMP LD probes (with 5 temperature sensors) can run 0.1 gph and 0.2 gph static leak tests. ProGauge DMP probes with 1 temperature sensor can run 1 gph tests as a minimum leak rate.

2" floats are required for leak testing.

- Continuous Statistical Leak Detection (CSLD) test: In this mode, the system monitors the tank during multiple short, quiet periods. It is necessary for this test to have given periods of quiet time where there are no deliveries to the tank and no withdrawals from the tank (for example, pump activity). All quiet periods are collected together and run through an advanced statistical analysis to calculate the leakage status for the tank. The results are recorded after a sufficient number of days. The CSLD test is a monthly test. The CSLD test can run at a leak rate of 0.2 gph.



NOTE: OPW 924B probes and ProGauge DMP LD probes (with 5 temperature sensors) can run 0.2 gph CSLD tests.

2" floats are required for leak testing.



NOTE: Continuous Statistical Leak Detection (CSLD) is only available on the LX Plus and LX Ultimate consoles.

6.3.7.1 Static Leak Test Setup

The screenshot displays the 'Automatic Leak Test' configuration page. At the top, there are tabs for 'Settings', 'Thresholds', 'Identity', 'Setup', 'Integration', and 'Leak Test'. The 'Leak Test' tab is selected and highlighted with a circled '1'. Below the tabs, the 'Leak Test Type' dropdown is set to 'Static' (circled '2'). The 'Frequency' dropdown is set to 'Daily' (circled '3'). The 'Leak rate' is set to '0.2' (circled '4'). The 'Leak rate' is also set to '0.2' (circled '5'). The 'Leak rate' is also set to '0.2' (circled '6'). The 'Leak rate' is also set to '0.2' (circled '7'). The 'Save' button is circled '8'.

On the Tanks Setup tab, click on the applicable tank. Configure the parameters as shown:

1. Select the **Leak Test** tab.
2. In the *Leak Test Type* drop-down, select **Static**.
3. Select the **frequency** of the test (Daily, Weekly, Monthly, Yearly).

4. **Leak test warning period in days:** This warning is in use when the user has selected the weekly, monthly or yearly frequency for an automatic test. If the console has not completed a leak test within x number of days in the frequency period, this warning will show to warn the user.

EXAMPLE: If Weekly auto test frequency is selected and the Warning period = 6 days. If after 6 days from the start of the week the console has not completed a leak test, a warning will show to notify the user.

5. **Duration (mins):** This is how long the test will run. The minimum is 30 mins. It is recommended to set this parameter to 120 mins.
6. **Minimum fill (%):** This is the minimum fill in the tank for a leak test to start. If the fill in the tank is less than this threshold, the leak test will not start. It is recommended to set this parameter to 50%.
7. **Leak test threshold (liters per hour, shown only when DMP-IS or XMT-SI probes with 1 temperature sensor is connected):** The minimum is 1 gallon per hour (3.785 liters per hour for XMT-SI probes and for DMP-IS probes with 1 temperature sensor. For DMP probes with 5 temperature sensors and for OPW 924B probes the threshold can be 0.2 gph or 0.1 gph.
8. Push **Save** to save this configuration.

For a Scheduled Test, select a date from the date picker, then configure the parameters as above.


6.3.7.2 CSLD (Continuous Statistical Leak Test) Setup (LX Plus and LX Ultimate Only)



1. Select the **Leak Test** tab.
2. In the *Leak Test Type* drop-down, select **CSLD**.
3. **Extend data collection:** During data collection for tests, this option increases the data collection time so the reliability of the results is higher. This setting is automatically set to ON for manifolded tanks and for tanks with capacity more than 49205 liters (13000 US gallons).

4. **High Activity mode:** For sites with high throughput, enable this option to decrease the quiet time for data collection.
5. **Auto Re-test Confirmation:** If this option is enabled and the SLD test fails the first time, the system will not show a FAIL result. The system will run the test a second time.
6. **Manifold offset:** Enable this option to cause an alarm for loss of siphon. The Manifold offset is the difference of the product levels in manifolded tanks. The manifold offset is added to the calculation of product levels to equalize the levels. Different product levels can be seen if the tanks are not leveled out within the ground.
7. Push **Save** to save this configuration.

6.3.7.3 On-demand Test

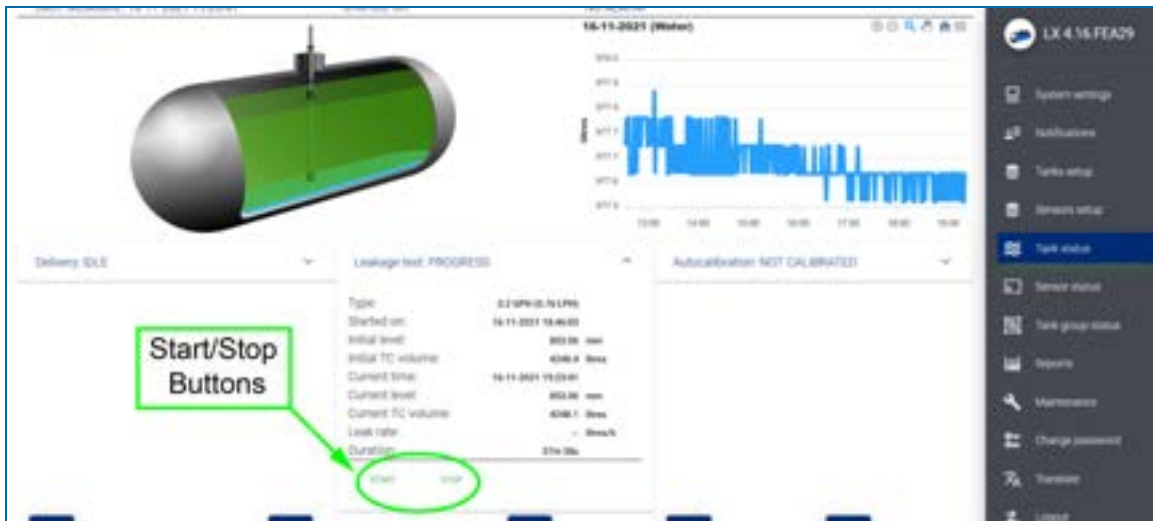

From the tank status tab, click on the **Leakage test** drop-down menu. Use the Start/Stop buttons to start or to stop a test.

6.3.8 ACR mode

The menu in the image below will show when the tank is in ACR Mode.

The screenshot shows a software interface with a dark blue header bar containing navigation icons and labels: Settings, Thresholds, Density, Relays, Strippable, ACR mode (highlighted), and ACR results. Below the header, the 'ACR CONFIGURATION' section includes three input fields for 'Unstable delivery timer (min)', 'Start delivery detection (liters)', and 'End delivery detection (liters)', each with a value of 5 and a unit of 0.16. A 'Vapor Recovery System' dropdown menu is set to 'No Vapor Recovery System', and an 'Evaporation factor (%)' field is set to 0 with a unit of 0.16. The 'CALIBRATION PARAMETERS' section includes a 'Calibration segments' section with 'Number of segments (25-45)' set to 5 (unit 0.16), 'Low segment' set to 0 (unit 0.16), and 'High segment' set to 5 (unit 0.16). Below this, 'Accepted values 25 - 45' is shown in red. The 'Calibration cycles' section has 'Min' set to 0 (unit 0.16) and 'Max' set to 0 (unit 0.16), with 'Accepted values 0 - 100' shown in red.

6.3.8.1 ACR Configuration Parameters

- **Unstable delivery timer:** Enter the time necessary to let the product settle at the end of delivery. Turbulence can occur during and after a delivery. This can cause incorrect indications. Enter a time from 0 (disable) to 59 minutes. After this time a probe can be monitored as usual. The recommended value is five (5) minutes.
- **Start delivery detection:** This shows the minimum quantity of product increase necessary to start delivery detection. The recommended value is 100 liters.
- **End delivery detection:** This is the quantity (in gallons/liters) for each minute to show the end of delivery. The recommended value is 20 liters (5.25 gallons).
- **Vapor Recovery system:**
- **Evaporation factor (%):** This is used only when ACR tank mode is selected to calculate evaporation loss as a percentage of unit volume. For diesel products enter "0," for unleaded products enter "0.17."


6.3.8.2 Calibration Parameters

- **Number of segments:** The tank is divided into a specified number of segments for Autocalibration. The permitted range is 25-45 segments. The higher number of segments selected, the more precision in the Autocalibration. This would also increase the time to complete Autocalibration.
- **Low segment:** This shows the lowest segment of the calibration range.
- **High segment:** This shows the top segment of the calibration range.

- **Calibration cycles max:** This is the maximum calibration cycles value parameter. This sets the number of auto calibration cycles in which the segments will not be changed if the auto calibration process is not complete. the minimum value is 5 and the maximum is 10.
- **Calibration cycles required:** This value specifies the Autocalibration status percentage (%).

When each segment of the specified auto calibration volume range is at this value, Autocalibration is complete. Because there can be segments in an Autocalibration cycle that are not changed, some segments can be changed more than the required value.

6.3.9 ACR Results

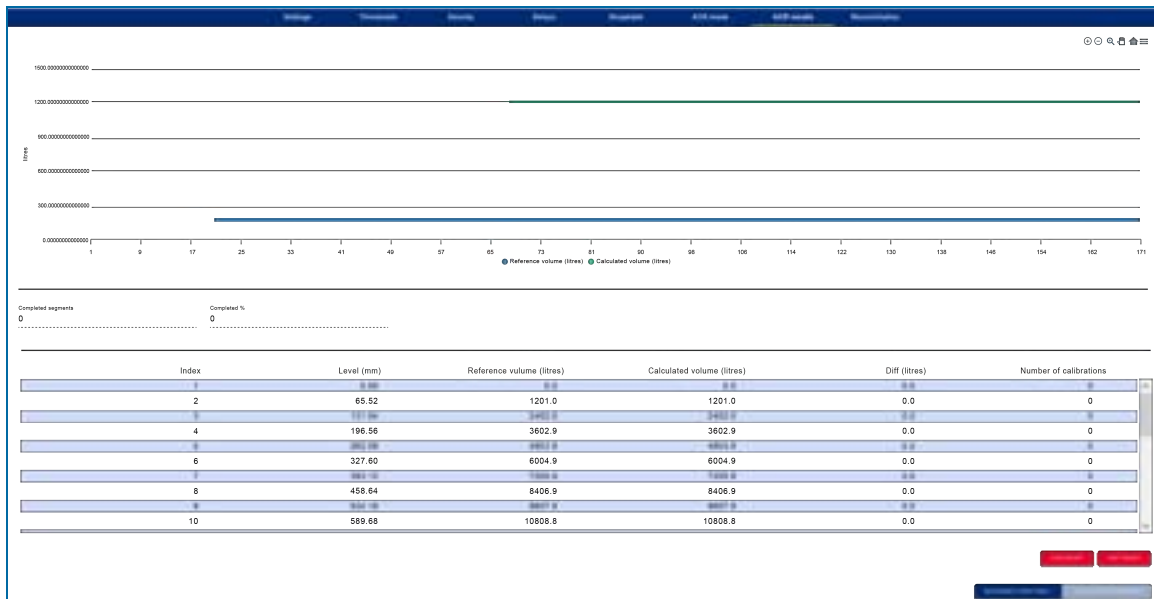

The graphic shows the reference chart (entered by the user) and the autocalibration chart.



1. The **Reference straptable** and **Calculated straptable** buttons control which of the two straptables to use for the current volume conversions. When autocalibration is complete, the user must select one of the two buttons to use the "Reference" table or to use the "Autocalibration" table.
2. The **Cold reset** button will delete all data (autocalibration table and number of calibrations) and the procedure will start again.
3. The **Soft reset** button will delete the number of calibrations but will keep the autocalibration table. This lets the user improve the autocalibration if the autocalibrated data is not sufficient.

6.3.10 Reconciliation

The screenshot shows the 'Reconciliation' tab for 'Tank 1 (Serial: 29582)'. The interface includes a top navigation bar with 'Tank 1', 'Tank 2', and 'Tank 3'. Below this is a sub-header 'Tank 1 (Serial: 29582)' with a link to 'Configure Tank 1 (Serial: 29582)'. A secondary navigation bar contains icons for Settings, Reconciliation, Security, History, Integrations, and WOT mode. The main area is divided into two columns. The left column contains 'Test vend (liters)' with a value of 10, 'Unexpected sales (liters)' with a value of 0, and 'Average time (min)' with a value of 30. The right column contains 'Loss warning (liters)' with a value of 10, 'Loss alarm (liters)' with a value of 10, and 'Unaccounted variance (%)' with a value of 10. A 'Save' button is located at the bottom right.

- **Test vend:** This is the quantity of product used in the calibration of hose meters. In meter calibration, there is a product quantity removed from the tank without a related sale. if *Unaccounted variance* is greater than Test vend threshold, then it is reported as “Test vend” and it is not thought of as a “Loss”.
- **Unexpected sales (liters):** An alarm will be caused when the tank is in a quiet mode (there are no sales) and product loss is sensed.
- **Average time:** This specifies the time for the loss warning or loss alarm.
- **Loss warning (liters):** A difference more than this threshold will cause a Loss Warning
- **Loss alarm (liters):** A difference more than this threshold will cause a Loss Alarm.
- **Unaccounted variance (%):** If a difference in the daily reconciliation is more than this threshold, it will cause an alarm.

Section 7 - Sensor Setup

7.1 ProGauge Sensors



To add a ProGauge sensor:

1. Tap the “+” sign to add a new sensor.
2. Enter a Sensor Id **number** (e.g. 1, 2, 3 etc.).
3. When the **Enabled** button is on (blue), the sensor is enabled in the system. To disable a sensor, tap this button again so it is "grayed-out." The sensor's configuration will stay but alarm conditions cannot be caused.
4. Select a **Sensor Type** from the drop-down:
 - **On/off**: ProGauge sensor with one float only.
 - **Discriminating**: ProGauge sensor with two floats. One float that can sense product and one float to sense water.
 - **2 Ch Wireless sensor**: ProGauge wireless RF sensor with two floats (product, water).
 - **1 Ch Wireless sensor**: ProGauge wireless RF sensor with one float (product).
 - Other selections refer to OPW-FMS Smart Sensors (for the LX Plus and LX Ultimate models only).
5. Enter a **Name** for the sensor (up to 30 characters).
6. **Compliance**: Put the button in the ON (blue) position if the sensor is to be part of the Compliance reporting. The sensor compliance feature is a way to see the report for specified sensors for 3 periods: Today, Last 24 Hours and Last 12 Months (or selected date).
7. **Position of Product / Position of Water**: This field is enabled only when a ProGauge discriminating sensor has been selected. The user must give a slot number on the CN10 connector or on the input card of the MagLink I/O

8. **Sensor Channel:** This is applicable only when a ProGauge On/off or Discriminating sensor has been selected. Select where the sensor is to be connected. Internal refers to the internal CN10 connector (only EXd sensors can connect to the CN10). For Intrinsically Safe sensors, select the MagLink I/O.
9. **Alarm status:** Select the method that will cause an alarm:
 - **Open:** For normally open sensors, the alarm is caused when the sensor contact closes.
 - **Closed:** For normally closed sensors, the alarm is caused when the sensor contact opens.



NOTE: The ProGauge on/off and discriminating operate as normally closed sensors.

10. Select the **Location** (Tank number) of the sensor.
11. Click **Save** to save the Settings configuration.

7.1.1 OPW FMS Smart Sensors (LX Plus and LX Ultimate only).



OPW-FMS Smart Sensors are automatically detected and will come into view next to the "+" sign in the header. The sensor type and serial number will show automatically on the relevant fields (fields 3,5).

To configure the sensor:

1. Make sure the applicable sensor is selected in the header. Enter a number for the sensor to identify the sensor in the configuration.
2. Push the **Enable** button. If the sensor is not enabled (and the button is "grayed-out") the system cannot read the sensor status (but the sensor configuration can continue to be saved).
3. The **Sensor Type** will automatically show when the sensor is detected.
4. Enter a **name** for the sensor
5. The **Serial Number** will automatically show when the sensor is detected.
6. Select a **Location** from the drop-down. This is used for information only.

Click **Save** to save the Settings configuration.

7.2 Relays



Use this screen to start a relay when a sensor is in an alarm condition.

Select between the internal relays or the external relays on the MagLink I/O or the OM4 relays (for LX Plus/Ultimate only). The external relays must first be configured in the System Settings > Site Info menu).

Select the sensor alarm that will start the relay:

The table below shows the warnings/alarms that will be caused by the different FMS smart sensors:

<i>Sensor part number</i>	<i>Description</i>	<i>Warning/Alarm message generated on console</i>
30-0232-DH-10	Discriminating Dispenser sump sensor	No link Open Short
30-0232-DH-20	Discriminating STP sump sensor	High (when sensor detects hydrocarbons) Liquid warning (when bottom float lifts in liquid) High liquid (when top float lifts in liquid)
30-0236-LW	Discriminating interstitial sensor (optical)	No link Water (when sensor detects water) High liquid (when sensor detects any liquid other than water)
30-0234-HW-06/15/20	Hydrocarbon liquid sensor with water indicator (6, 15, 24 ft lengths)	No link Open Short Water (when sensor detects water) High liquid (when sensor detects hydrocarbons)


<i>Sensor part number</i>	<i>Description</i>	<i>Warning/Alarm message generated on console</i>
30-0234-HW-01	Interstitial hydrocarbon liquid with water indicator	No link Open Short Water (when sensor detects water) High liquid (when sensor detects hydrocarbons)
30-0231-S	Interstitial sensor-float switch-(small plastic)	No link
30-0231-L	Sump sensor-float switch-(large plastic)	High
30-0230-S	Liquid only float sensor (brass)	
30-0232-D-10	Dual float non-discriminating dispenser sump sensor	No link Open Short
30-0232-D-20	Dual float non-discriminating STP sump sensor	Liquid warning (when bottom float lifts in liquid) High liquid (when top float lifts in liquid)
30-0232-D-10B	Dual float brine sensor for containment sump	No link Open Short
30-0232-D-20B	Dual float brine sensor for fiberglass tanks	Low liquid (when bottom float falls below normal position) High liquid (when top float lifts above normal position)
30-0235-V	Hydrocarbon vapor sensor	No link Open Short Vapor (when sensor detects hydrocarbon vapor)

The table below shows the warnings/alarms that will be caused by the different Progaug sensors:

<i>Sensor part number</i>	<i>Description</i>	<i>Warning/Alarm message generated on console</i>
10-SL1-L110-C	On/Off sensor	No link
10-SL1-L110-GJE		High
10-SL2-L200-GCD	Discriminating sensor	No link
10-SL2-L200-GJKE		High (when top float lifts) Water (when bottom float lifts)

<i>Sensor part number</i>	<i>Description</i>	<i>Warning/Alarm message generated on console</i>
3-XRF600GAB-D1R0-DSC	Wireless (2 floats)	No link
		High (when top float lifts)
		Water (when bottom float lifts)
3-XRF600GAB-D1R0-DSC	Wireless (1 float)	No link
		High

Section 8 - Tank Status

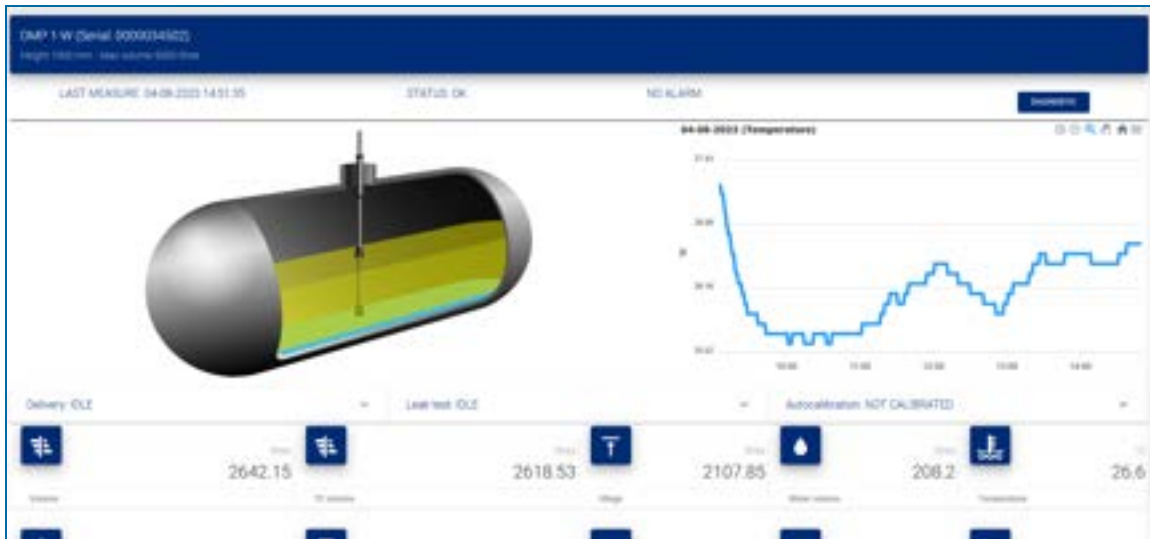

A colored icon next to each tank icon in the top bar shows the status of the tanks:


- Yellow: Alarms are active and they have been acknowledged.
- Red: Alarms are active but they have not been acknowledged.
- Green: There are no alarms for this tank.
- Grey: The tank is disabled.

The graph on the right side of the screen will scroll automatically to show the information that follows:

- Product / water height
- Product volume / Product volume TC
- Water volume
- Density / TC density
- Temperature



Select the Diagnostic button to open the Diagnostic panel to show information on the quality of the probe signal (to be assessed by the Progaugage factory personnel).

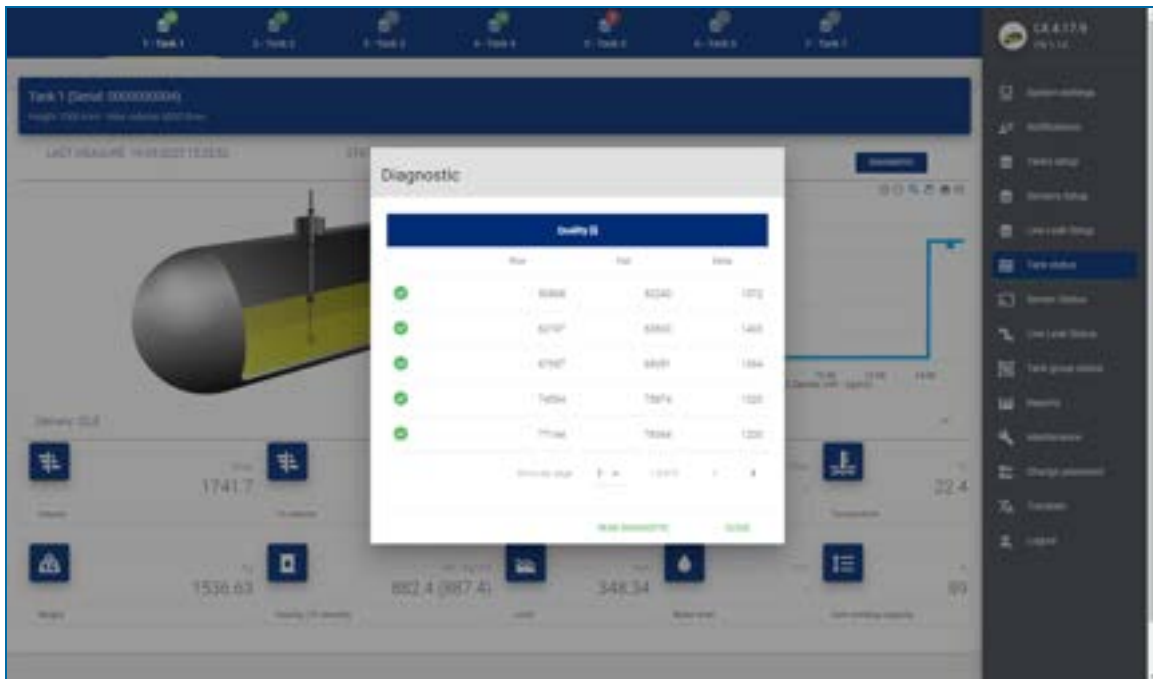

The green check-mark in the left column shows that the signal strength is sufficient.

A yellow check-mark shows a medium signal while a red check-mark would show a low quality probe signal.

The bottom of the screen shows information on the Deliveries, Leak Tests and Autocalibration.

- **Delivery:** Click on the Delivery drop-down menu to show information on the last delivery recorded.



- **Leakage test:** Click on the Leakage drop-down menu to show information on the status of the leakage function. The user can manually start and stop a leak test from this menu.



- **Autocalibration:** This is only available when the tank is in ACR mode. Click the **Autocalibration** drop-down menu to show information on the status of the autocalibration function.




Tank inventory is shown at the bottom of the page.

TC volume refers to the temperature compensated volume. This is calculated through the API tables.




Section 9 - Sensor Status

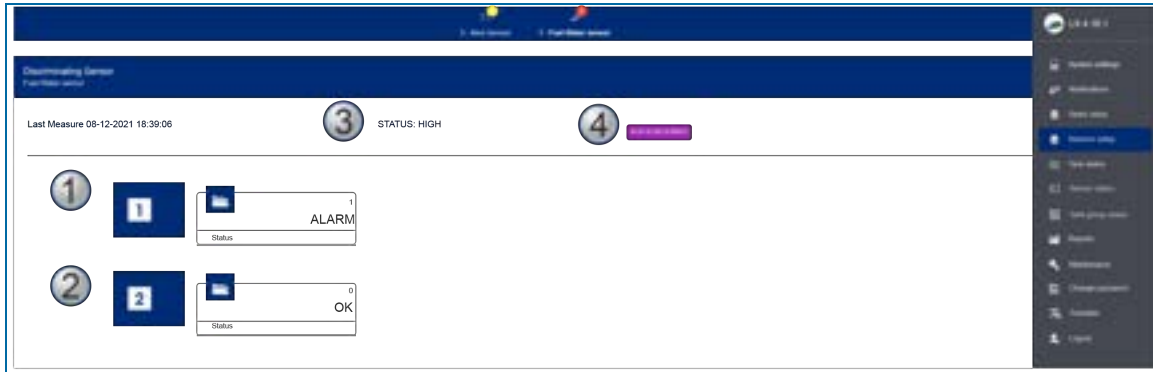

The Sensor Status screen is shown in the image above. The icons in the example refer to a ProGauge Discriminating Sensor with two floats.

1. Icon 1 shows the status of the **Product** float.
2. Icon 2 shows the status of the **Water** float.
3. The full sensor status is shown at the top of the panel.
4. Push the ACK IS REQUIRED button to acknowledge the alarm. This will also stop the alarm buzzer.


Section 10 - Tank Group Status

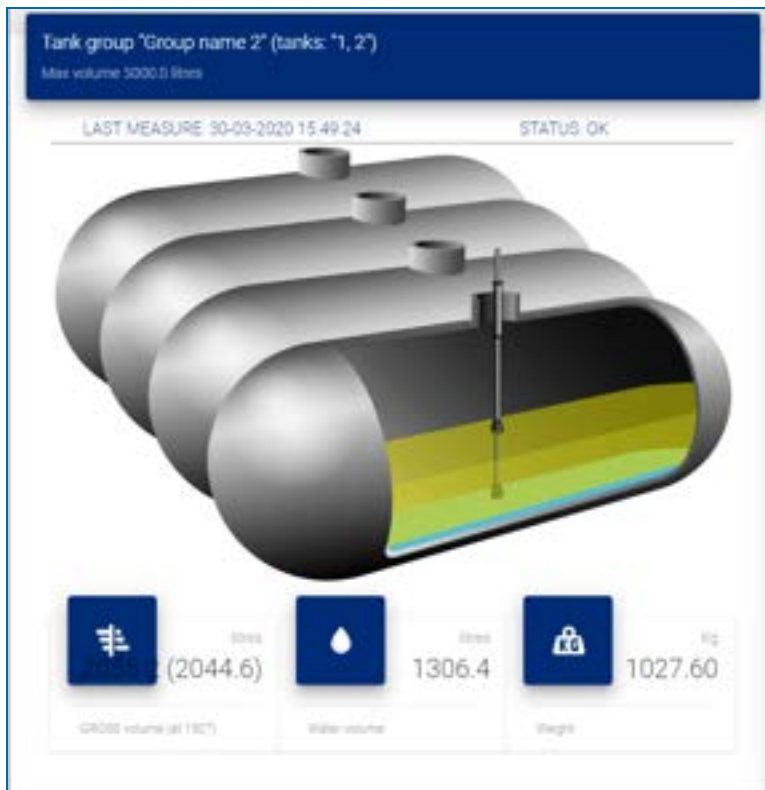

A summary of the tank group is shown on this screen:

- Gross volume (at 15°C)
- Water volume
- Mass (in Kg)

Section 11 - Reports Menu

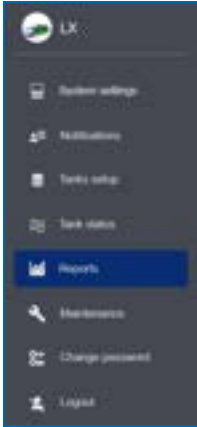

Reports can be made for 12 types of information:

- Tank inventory History
- Tank Alarms
- Sensor Alarms
- Line Alarms (LX Plus and LX Ultimate models only)
- Product Deliveries
- Tank Leak Tests
- CSLD Leak Tests (LX Plus and LX Ultimate models only)
- Line Leak Tests (LX Plus and LX Ultimate models only)
- Compliance
- Pump Sales
- Shifts
- Reconciliation
- Configuration

11.1 History




To set up a History Report:

- Select a **Tank Number** from the drop-down.
- Use the date-selector to select a **From Date** for your report.
- Select to see the data in a **Table** or **Graph**.
- The History Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

Tank	Description	Time	Level (mm)	Pressure (bar)	RT resistance (ohm)	Storage tank (bar)	Water tank (bar)	Temperature (°C)	Weight (kg)	Volume (mm³)	Status
1	W48	12-07-2024 10:27:00	400	2400.00	2400.34	0	0	23.5	1854.80	2284.06	OK
2	SWP 140	12-07-2024 10:27:00	906.71	4701.00	4748.00	94.43	470.10	26.6	3068.17	886.40	OK
5	AMSTER 7100V	12-07-2024 10:27:00	602.96	3113.00	3091.87	180.2	910.01	26.6	1820.09	1827.07	OK
6	SWP 400.DENSITY	12-07-2024 10:27:04	623.96	4719.00	4692.42	43.75	216.75	27.1	2807	400.00	OK

In the Current sub-menu, the current inventory of the tanks can be seen and can be exported into a csv file. Select the tank or activate the **All Tanks** slider button. Then, select **Load**.

11.2 Tank Alarms

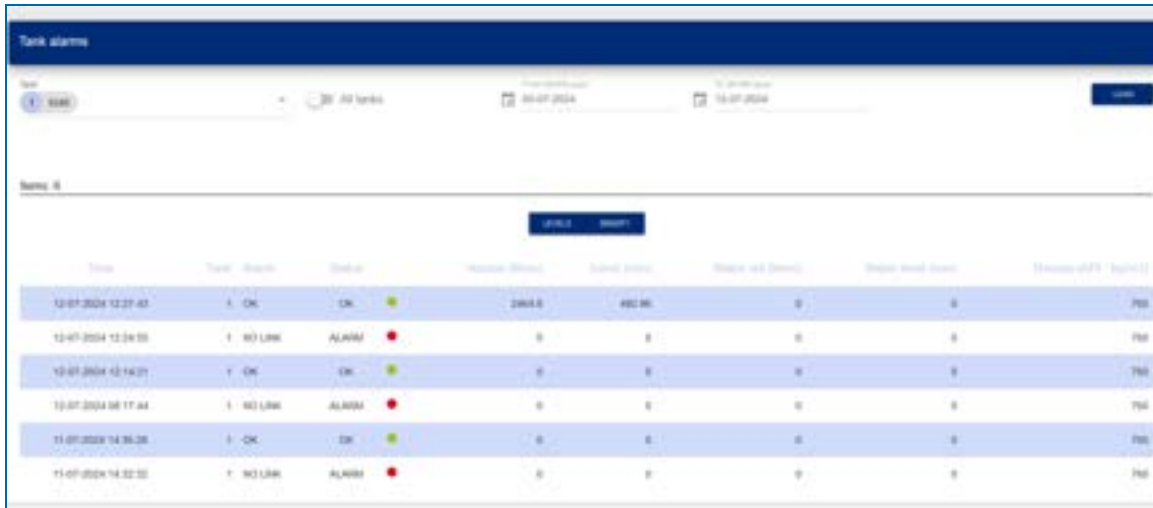


The screenshot shows the 'Tank alarms' interface. At the top, there is a 'Tank' dropdown menu with '1' selected, a 'Load' button, and date selectors for 'From date' (28-07-2024) and 'To date' (16-07-2024). Below the filters, there is a 'Density' button. The main table displays alarm events with columns: Time, Tank, Alarm, Status, Pressure (Bar), Density (kg/m³), Weight (kg), Weight (kg), and Density (kg/m³). The table shows several rows of data, including 'OK' and 'ALARM' status entries.

Time	Tank	Alarm	Status	Pressure (Bar)	Density (kg/m³)	Weight (kg)	Weight (kg)	Density (kg/m³)
12-07-2024 12:27:45	1	OK	OK	2805.0	492.96	0	0	750
12-07-2024 12:34:55	1	NO LINK	ALARM	0	0	0	0	750
12-07-2024 12:14:21	1	OK	OK	0	0	0	0	750
12-07-2024 08:17:44	1	NO LINK	ALARM	0	0	0	0	750
11-07-2024 14:36:28	1	OK	OK	0	0	0	0	750
11-07-2024 14:32:32	1	NO LINK	ALARM	0	0	0	0	750

1. Select a **Tank Number** from the drop-down. Alternatively, use the slider button to select **All tanks**.
2. Use the date selector to select a **From Date** and **To Date** for your report.
3. Click the **Load** button to show the data.
4. Click the **Density** button to see the density values in the table.

11.3 Sensor Alarms

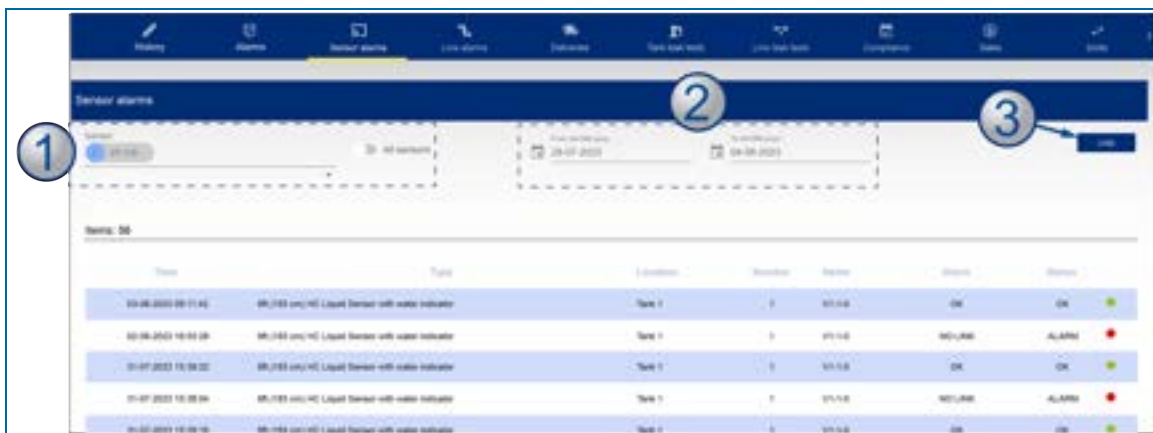

The screenshot shows the 'Sensor alarms' interface. At the top, there is a 'Sensor' dropdown menu with '1' selected, a 'Load' button, and date selectors for 'From date' (28-07-2024) and 'To date' (04-08-2024). Below the filters, there is a 'Density' button. The main table displays alarm events with columns: Time, Type, Location, Sensor, Status, and Density. The table shows several rows of data, including 'OK' and 'ALARM' status entries.

Time	Type	Location	Sensor	Status	Density
12-08-2024 09:11:45	001/001 (mg/L) Liquid Sensor with water indicator	Tank 1	0	OK	OK
12-08-2024 10:52:28	001/001 (mg/L) Liquid Sensor with water indicator	Tank 1	0	NO LINK	ALARM
12-07-2024 15:58:02	001/001 (mg/L) Liquid Sensor with water indicator	Tank 1	0	OK	OK
12-07-2024 15:58:04	001/001 (mg/L) Liquid Sensor with water indicator	Tank 1	1	NO LINK	ALARM
12-07-2024 15:58:10	001/001 (mg/L) Liquid Sensor with water indicator	Tank 1	0	OK	OK

1. Select a **Sensor** from the drop-down. Alternatively, use the slider button to select **All sensors**.
2. Use the date-selector to select a **From Date** and **To Date** for your report.
3. Click the **Load** button to show the data.

11.4 Line Alarms (LX Plus and LX Ultimate models only)

This report shows all alarms related to line leak. It will also show the results of leak tests with the test type, the running pressure in psi, the reference pressure of the test in psi and the leak rate (in gph on lts/hr).



1. Select a **Line** from the drop-down. Alternatively, use the slider button to select **All Lines**.
2. Use the date-selector to select a **From Date** and **To Date** for your report.
3. Click the **Load** button to show the data.

11.5 Delivery



1. Select a **Tank Number** from the drop-down.
2. Use the date-selector to select a **From Date** and **To Date** for your report.
3. Click the **Load** button to show the data.
4. The Delivery Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.6 Tank Leak Tests



1. Select **Tank Leak Tests** from the *Reports* menu.
2. Select a **Tank Number** from the drop-down.
3. Use the date-selector to select a **From Date** and **To Date** for your report.
4. Click the **Load** button to show the data.

Tank	Start/End time	Duration	Pressure (kPa)	Volume (m³)	Temperature (°C)	Result
1	2020-02-01 12:00:00 2020-02-01 12:05:00	00:05:00	0.0	0.0	20.0	PASS
2	2020-02-01 12:05:00 2020-02-01 12:10:00	00:05:00	-0.0	-0.0	20.0	PASS


This report will show the results of leak tests that have been done in the tanks.

The report will show:


- The start and end time of the test
- The Leak threshold
- The volume difference between the start-end (at ambient temperature and temperature compensated)
- The result of the test and if the test was aborted.

11.7 CSLD Leak Tests (LX Plus and LX Ultimate Models Only)

This report will show the results of CSLD leak tests that have been done in the tanks.

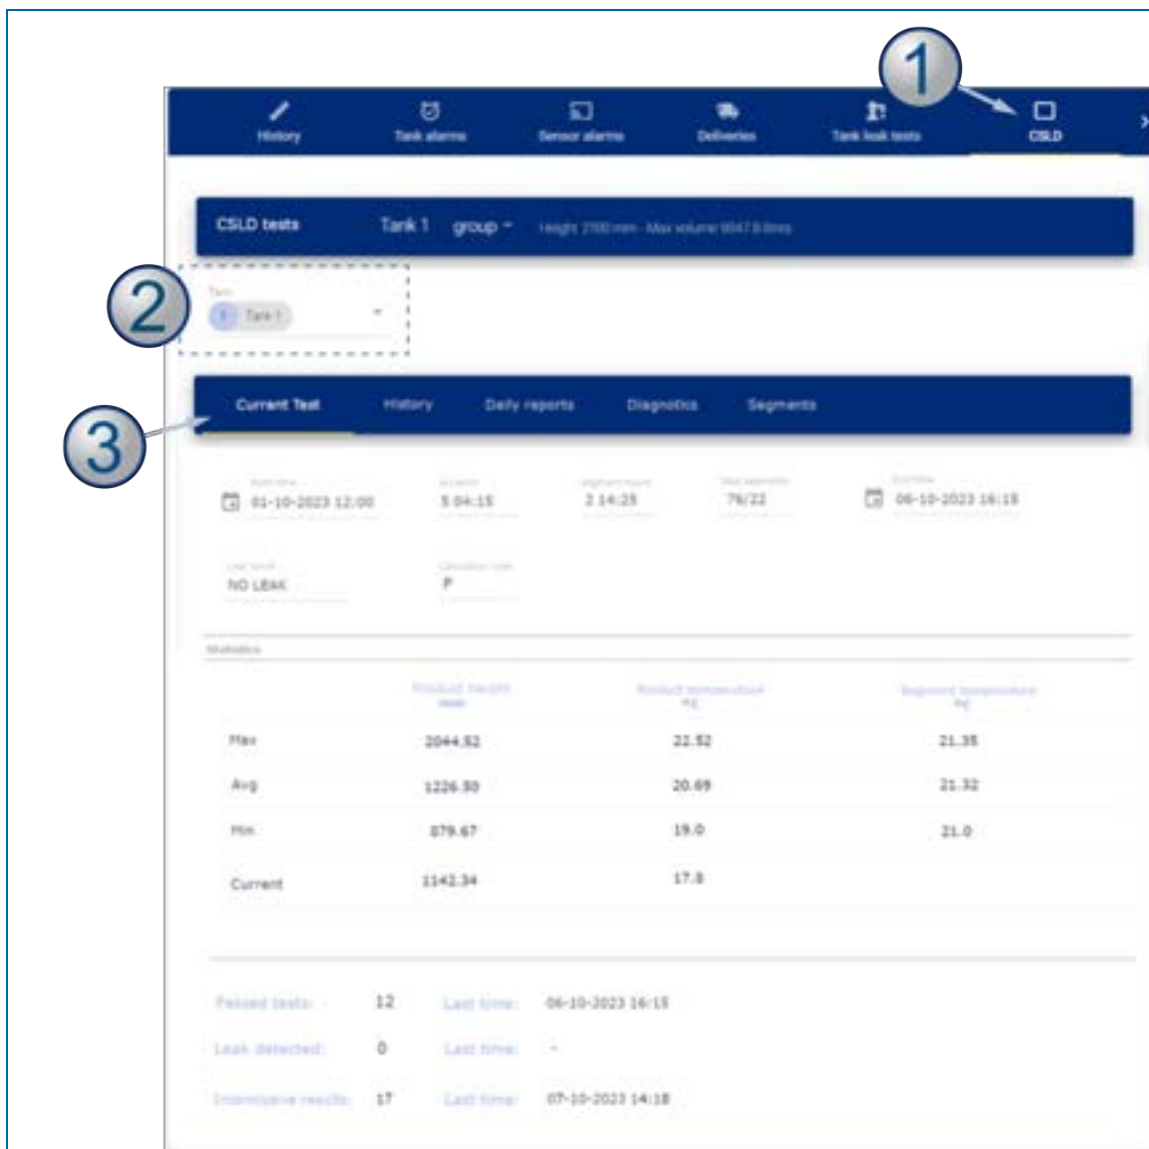

1. Select **CSLD** from the *Reports* menu.
2. Select a **Tank Number** from the drop-down.
3. Select **Current Test** from the sub-menu to see the results of the latest test.

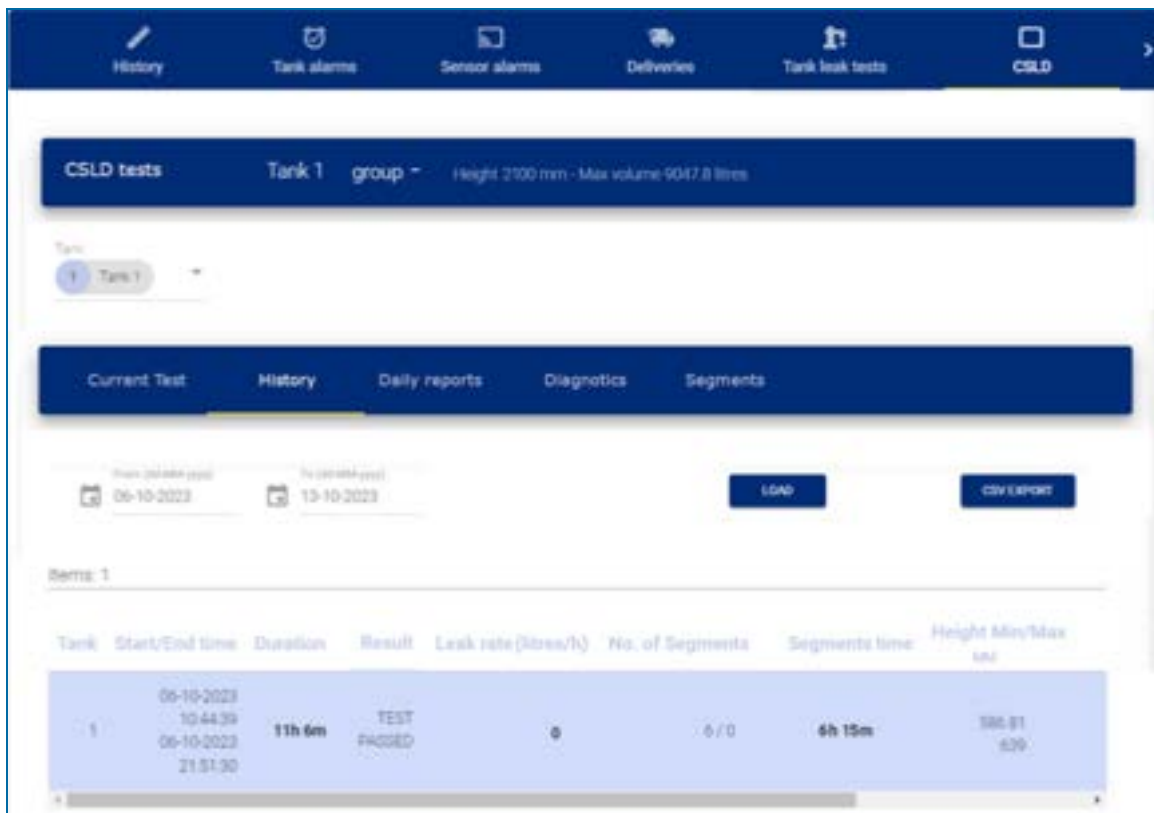


Select the **History** tab in the sub-menu to see:

- The start and end times of the test
- The duration of the test
- The test method
- The test result (pass or fail)
- The calculated leak rate
- The min/max product level during the test
- The average product level
- The min/max product temperature recorded during the test and the average temperature




NOTE: The Daily report, the Diagnostics and the Segments section are only available to the Technician account. See below.

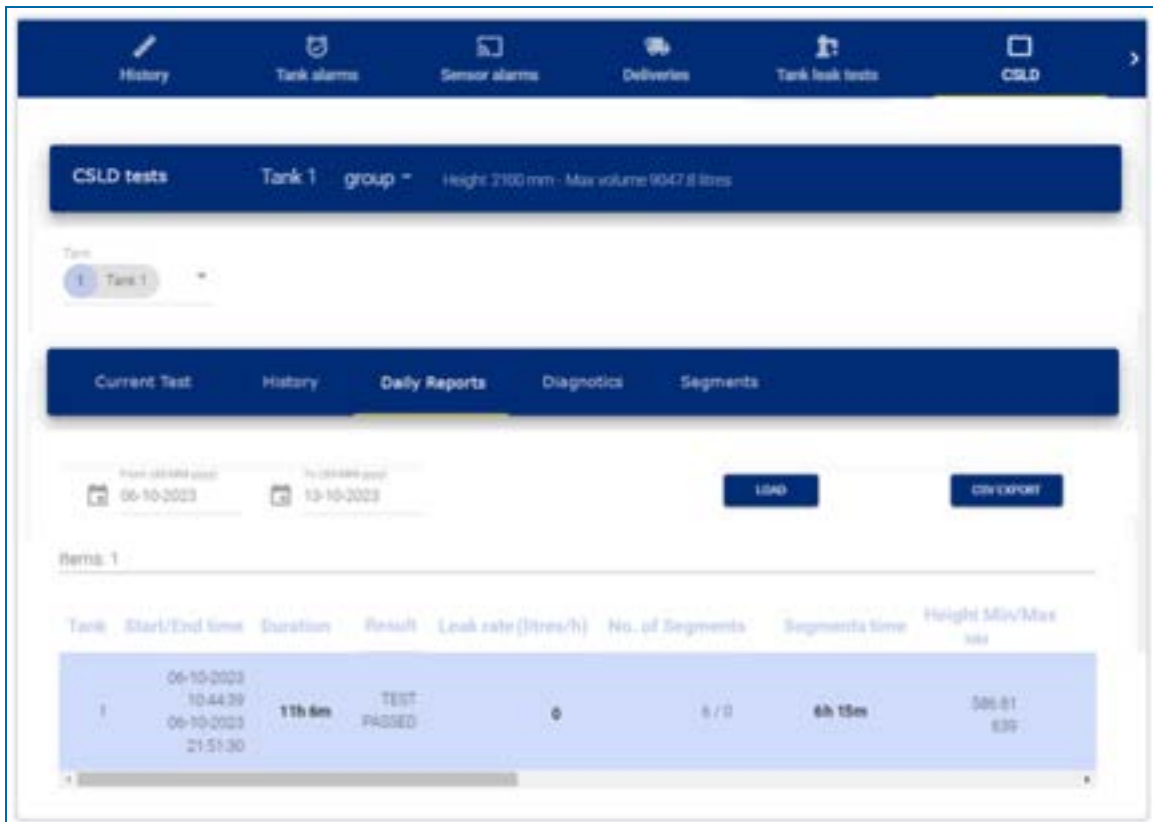

Select the **Daily Reports** tab (only available for Technician accounts) in the sub-menu to see:

- Test start time
- Test end time
- Test duration
- Test result
- Calculated leak rate
- Total segments (valid/invalid)
- Accumulated segment time
- Daily throughput
- Delivery frequency
- Segment length (min, max)
- Height of product (min, max, avg)
- Temperature of segments (min, max, avg, variance)
- Temperature of product (min, max, avg, variance)
- ht (min, max, avg, variance)
- mn (min, max, avg, variance)

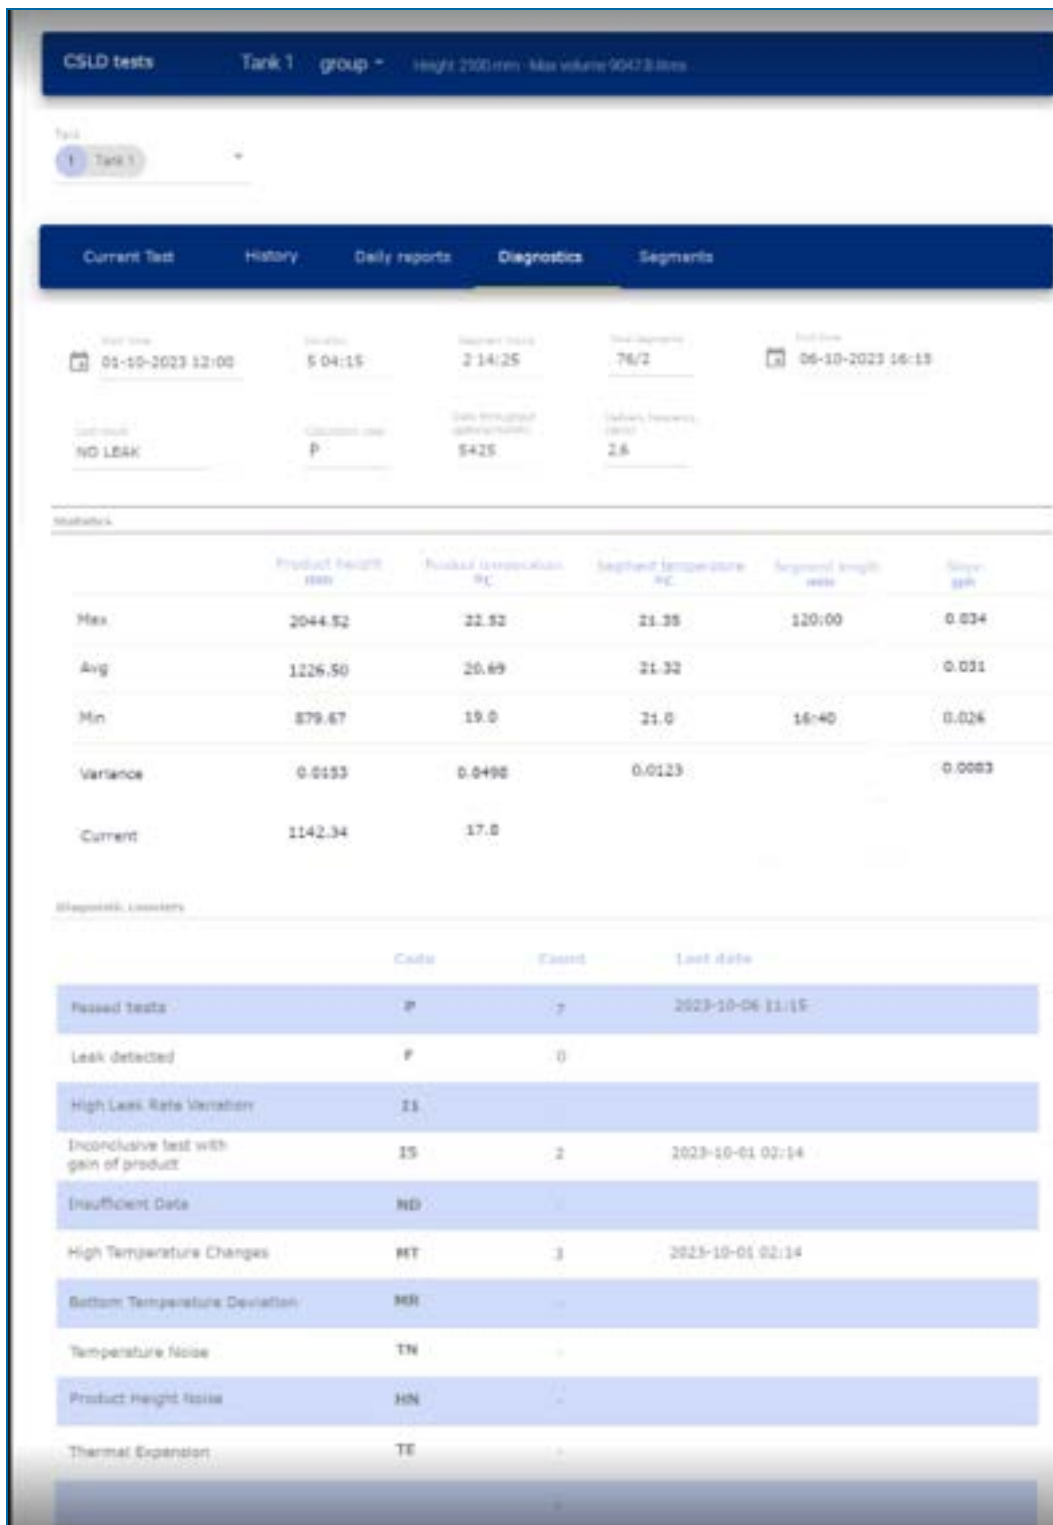

Select the **Diagnostics** tab (only available for Technician accounts) in the sub-menu to see:

- Test start time,
- Test end time
- Test duration
- Last test result
- Last calculation code (inconclusive code)
- Total segments (valid/invalid)
- Accumulated segment time
- Daily throughput
- Delivery frequency
- Current product level
- Current product temperature
- Segment length (min, max)
- Product level (min, max, avg, variance)
- Temperature of segments (min, max, avg, variance)
- Temperature of product (min, max, avg, variance)
- Slope (min, max, avg, variance)

Test diagnostic counters contain a table with the information that follows:

	<i>Calculation Code</i>	<i>Count</i>	<i>Last Date</i>
Passed Tests	P		
Leak Detected	F		
High Leak Rate Variation	I1		
Product Gain During Test	I5		
Insufficient Data	ND		
High Temperature Changes	MT		
Bottom Temperature Deviation	MR		
Temperature Noise	TN		
Product Height Noise	HN		
Invalid Thermal Expansion	TE		

Manifold counters			
	Code	Count	Last date
Height Differential	HC	1	2023-10-05 13:55
Manifold Broken	MB	0	
Jump Counter	J20	0	
Too little segments	I8	0	

If the tank is manifolded an additional table of diagnostic data is shown:

	Calculation Code	Count	Last Date
Height Differential	HD		
Manifold Broken	MB		
Jump Counter	J20		
Not Enough Segments	I8		

Manifold broken			
HT1	HT2	HTNumB	HTNumG
79.67	1016.50	12	32
HTDeltaStd	HTDeltaAvgB	HTDeltaAvgG	
0.1492	0.153	0.156	

For manifolded tanks the additional Manifold Broken diagnostic is shown with the information that follows:

- HT1
- HT2
- HTDeltaStd
- HTDeltaAvgB
- HTDeltaAvgG
- HTNumB
- HTNumG



Select the **Segment** tab (only available for Technician accounts) in the sub-menu to see table and graph information related to the tank's segments.

11.8 Line Leak Tests (LX Plus and LX Ultimate models only)

The screenshot shows the 'LLD Leak Tests' interface. Callout 1 points to a drop-down menu for selecting an LLD number. Callout 2 points to date-selector fields for 'From Date' and 'To Date'. Callout 3 points to a 'Load' button. Callout 4 points to a 'CSV Export' button. Below these controls is a table with the following data:

LLD ID	Start/End Time	Threshold	Type (liters/hr)	Leak Rate (liters/hr)	Ref. Pressure (psi)	Run. Pressure (psi)	Result
1	07-08-2023 17:21:07 07-08-2023 17:52:46	1m 40s	11.000	0	10	0	ABORTED (STOPPED)
1	07-08-2023 17:28:46 07-08-2023 17:28:27	2m 30s	11.000	0	10	10.00	ABORTED (STOPPED)
1	08-08-2023 10:44:16 08-08-2023 10:50:00	1m 10s	11.000	0	10	0	ABORTED (STOPPED)
1	08-08-2023 10:38:40 08-08-2023 10:41:27	1m 40s	11.000	0	10	0	ABORTED (STOPPED)

1. Select an **LLD number** from the drop-down.
2. Use the date-selector to select a **From Date** and **To Date** for your report.
3. Click the **Load** button to show the data.
4. The LLD leak test report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

This report will show the results of line leak tests that have been completed. The report will show:

- The start and end time of the test
- The Leak threshold (type)
- The leak rate calculated in liters/hr
- The reference pressure for the leak threshold
- The Running pressure (the running pressure is the pressure in the pipeline which is recorded once the STP has stopped to pressurize).
- The LLD leak test result.

11.9 Compliance

The Compliance report has three (3) sub-reports:

- A tank compliance report
- A sensor compliance report
- A LLD compliance report

Both reports show data related to the sensor statuses and the LLD leak tests.

11.9.1 Tank Compliance



1. Select **Tank Compliance** from the *Compliance* menu bar.
2. Select a **Tank Number** from the drop-down.
3. Use the date-selector to select a **Date**.
4. Select the applicable **timezone** radio button to which the data will be time-stamped.
5. Click the **Load** button to show the data.
6. The Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.9.2 Sensor Compliance Report



1. Select **Sensor Compliance** from the *Compliance* menu bar.
2. Select a **SensorNumber** from the drop-down.
3. Use the date-selector to select a **Date**.
4. Select the applicable **timezone** radio button to which the data will be time-stamped.
5. Click the **Load** button to show the data.
6. The Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.9.3 Line Compliance Report

This report shows a summary of LLD tests done for each line "today" and in the last 24 hours and identifies the last test passed.



1. Select **Line Compliance** from the *Compliance* menu bar.
2. Select a **Line Number** from the drop-down.
3. Use the date-selector to select a **Date**.
4. Select the applicable **timezone** radio button to which the data will be time-stamped.
5. Click the **Load** button to show the data.
6. The Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.10 Sales

This report will show the pump sales that are sent by the forecourt controller.





NOTE: Pump Sales Reports related to tanks can only be made when the reconciliation function is in operation and there is communication with a forecourt controller.

1. Select a **Tank Number** from the drop-down or use the slider button to select **All tanks**.
2. Use the date-selector to select a **Date** for your report.
3. Click the **Load** button to show the data.
4. The Sales Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.11 Shifts



This report will show the shifts related to specified tanks.

1. Select a **Tank Number** from the drop-down or use the slider button to select **All tanks**.
2. Use the date selector to select a **From Date** and **To Date** for your report.
3. Push the **Load** button to show the data.
4. The Shift Report can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

11.12 Reconciliation



There are three types of reconciliation reports available:


- Hourly
 - Daily
 - Petroleum (periodic)
1. Select a **Tank Number** from the drop-down.
 2. Use the date selector to select a **From Date** and **To Date** for your report.
 3. Select a **report type** (Hourly, Daily, Petroleum).
 4. Push the **Load** button to show the data.
 5. These reports can be exported to a csv format that can be saved in a spreadsheet or text editor. Click the **CSV Export** button to continue.

Below are descriptions of the contents of each report:

HOURLY REPORT

This report will show (see the image above):

- The Loss rate in liters / hour up to that hour (cumulative figure).
- The volume, the level and the temperature at the end of the hour.
- The cumulative dispenser sales (field Sales) up to that hour.
- The difference in liters because of the temperature difference between the current hour and the hour before.
- The difference in liters because of the evaporation between the current hour and the hour before (only if an evaporation factor has been programmed in the ACR settings in the Tank Setup).
- The difference because of the water change in liters between the current hour and the hour before.

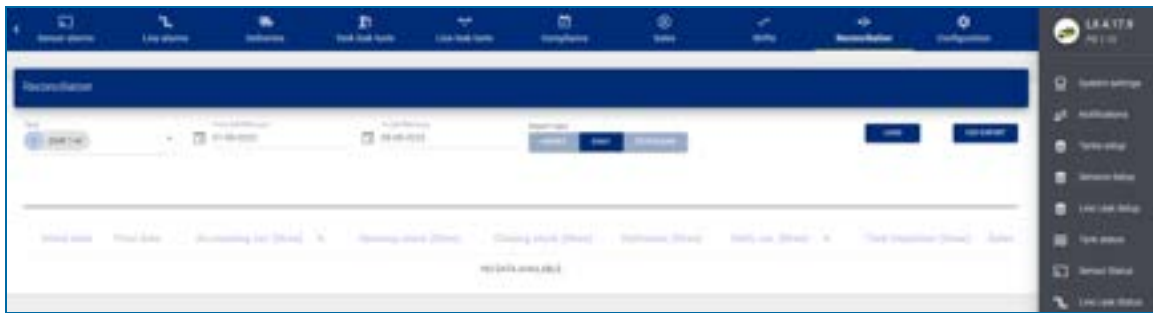

DAILY REPORT

This report will show (see the image above):

- The opening and closing stock for the day.
- The delivered volume for the day.
- The delivery variance for the day.
- The tank depletion for the day.
- The pump sales for the day.



PETROLEUM REPORT

For a given period, this report will show (see the image above):

- **Accounting var** (variance): This is the sum of Operating variance and Delivery variance, shown in liters and as a % of tank sales
- **Deliveries**: The quantity of liters delivered.
- **Delivery var** (variance): This is the Delivery variance. This is calculated as the difference between ATG measured delivery and invoiced delivery (invoice detail entered manually during delivery report). The result is shown in liters and as a % of tank sales.
- **Tank depletion**: The quantity of liters physically kept in the tank.

- **Pump sales:** The quantity of liters that were sold by the tank (as recorded by the dispensers).
- **Test vend:** The quantity of fuel that was pumped out of the tank during a pump calibration check.
- **Operating var** (variance): This is the difference between Tank Depletion and Pump Sales, In liters and as a % of tank sales.
- **Temp var** (variance): This is a temperature difference for the given time period.
- **Evap var** (Evaporation variance): This is an evaporation difference for the given time period.
- **Water var** (variance): This is a difference because of a change in the water volume for the given time period.
- **Pump calib** (calibration): This is a difference because of the dispenser meter drift (this is only applicable if a meter offset has been programmed in the Site Mapping).
- **Theft:** This is a difference that was recorded as a theft (it will be necessary for the Unexpected Sales threshold to be programmed in the Reconciliation settings in the Tank Setup).
- **Unaccounted var** (variance): This is calculated as:
 - $\text{Unaccounted variance} = \text{Operating variance} - \text{Temp variance} - \text{Evap variance} - \text{Water variance} - \text{Pump calibration} - \text{Theft}.$
 - This is calculated in liters and as a percent of sales.

11.13 Configuration



A summary of the configuration is given in this menu. Click the **PRINT** button to print the configuration report to a printer connected to the PC.

Use the three (3) relay slider buttons (“Print Tanks Relays,” “Print Sensors Relays,” “Print LLDs Relays”) to include relay configurations for the different modules.

Section 12 - Maintenance

The Maintenance Menu has tabs to get access to technical manuals, wiring diagrams configure the console's Time zone (and Time and date), Network Configuration, Utility functions and Console settings.

12.1 Manuals



Click the **Manuals** icon in the *Maintenance* menu to get access to the Installation (M2050 for LX 4, M2050-PLUS for LX Plus and M2060 for LX Ultimate), Configuration (M2051 for LX 4, LX Plus and LX Ultimate) and User (M2052 for LX 4, LX Plus and LX Ultimate) manuals and Wiring diagrams (for LX Plus and LX Ultimate) for your console.




IMPORTANT: There are separate manuals for Installation. M2050 is for the installation of the LX 4 console, M2050-PLUS is for installation of the LX Plus console and M2060 for the installation of the LX Ultimate console.

12.2 Timezone



1. Use the calendar and clock tools to select the date and time.
2. Select the applicable **time zone** from the drop-down.
3. Click **Save**. The console application will restart.

12.3 Network Configuration

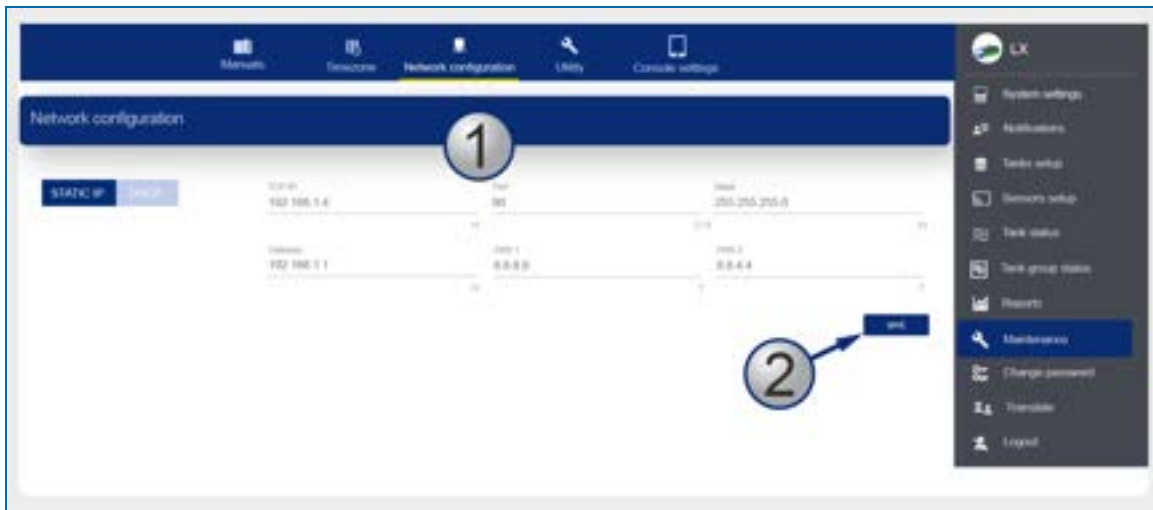

1. Enter the **network parameters** into the applicable fields
2. Click **Save** when you have completed all applicable fields.

12.4 Utility

The screenshot shows a web-based utility interface with a sidebar on the left containing seven numbered steps (1-7). The main content area is divided into sections corresponding to these steps:

- Step 1:** 'Update console' section with a 'Select zip file' button and an 'Update' button.
- Step 2:** 'Database backup' section with a dropdown menu, a 'Create new backup' button, and a 'Download backup to PC' button.
- Step 3:** 'Restore backup' section with a 'Restore selected backup' button.
- Step 4:** 'System settings' section with a dropdown menu and a 'Save settings' button.
- Step 5:** 'System status' section with a 'Refresh status' button.
- Step 6:** 'System logs' section with a 'View logs' button.
- Step 7:** 'System restart' section with a 'Restart system' button.

At the bottom of the interface, there are three buttons: 'Back', 'Next', and 'Cancel'.

Utility functions can be done in this screen.

1. **Update Console:** Use this function to do a software update. You must get the update zip file through DFS.
 - Click the **Select zip file** button to select the update file.
 - Click the **Update** button to install the update.
2. **Database backup:** In this part of the screen you can;
 - Make a database backup and store it on the SD card. Click the **Create new backup** button. A new, date-stamped backup file is stored on the SD card.
 - Download the backup to your computer. Select the applicable file from the drop down menu. Click the **Download backup to PC** button. The console will automatically reboot.



NOTE: The download procedure downloads two (2) files:

- » data_YYYY-MM-DD_HH-MM-SS.zip. This is the database backup that contains the configuration and events.
- » temp_data_YYYY-MM-DD_HH-MM-SS.zip. This is the configuration backup only.

- Restore the backup that is stored on the SD card: Select the applicable file from the drop-down menu. Click the **Restore selected backup** button.

- Delete the backup that is stored on the SD card: Select the applicable file from the drop-down menu. Click the **Delete selected backup** button.
3. **Upload backup:** Use this part of the screen to upload the database backup file **data_yyyy-mm-dd_hh-mm-ss.zip** and the configuration backup **temp_data_yyyy-mm-dd_hh-mm-ss.zip**.
 - Select the applicable **database backup** file.
 - Select the applicable **configuration backup** file.
 - Click the **Restore backup** button to install these backup files.
 4. **Log files:** To download log files to your computer:
 - Select the applicable **log file** from the drop-down menu.



NOTE: The log file that contains information on probes/sensor/communications functions can be found in the iTouch.log. This is the most common log file that DFS tech support will ask for when troubleshooting a problem.

- Click the **Download Log File** button.
5. **Upload License:** To upload the applicable license file for your system:
 - Click the **Select license file** button to select the applicable file.
 6. **Upload Configuration File:** For specific regions, a special configuration can be given that will update the products list and will set some specific parameters such as customer Id and daily one time password management.
 - Click the **Select Configuration File** button to select the applicable file.
 7. **Console reset:**
 - Click the **Reboot** button to restart the console.
 - Click the **Cold Reset** button to put the console back in original factory default settings. This procedure will remove the database.
 - Click the **Clear Cache** button to clear the cache memory of the console. This is useful if the console responds to functions too slowly or when the alarms status does not update correctly.

12.5 Diagnostic (for LX Plus and LX Ultimate Only)



This menu shows a summary of the devices that have been detected on the ISB (LX Plus and LX Ultimate models only) and devices that have been configured.



NOTE: In the Other Devices panel (for LX Plus and LX Ultimate models only) these devices will show when they are detected:


PC board (auxiliary board where the ISB connects)
LIM (Line Interface Module)
VSmart Module

12.6 Communication



Communication: This is a report that will show the Fairbanks transfers history and what is waiting in the buffer to be sent. Similarly it shows email notifications history and what is waiting in the buffer.

12.7 Console Settings

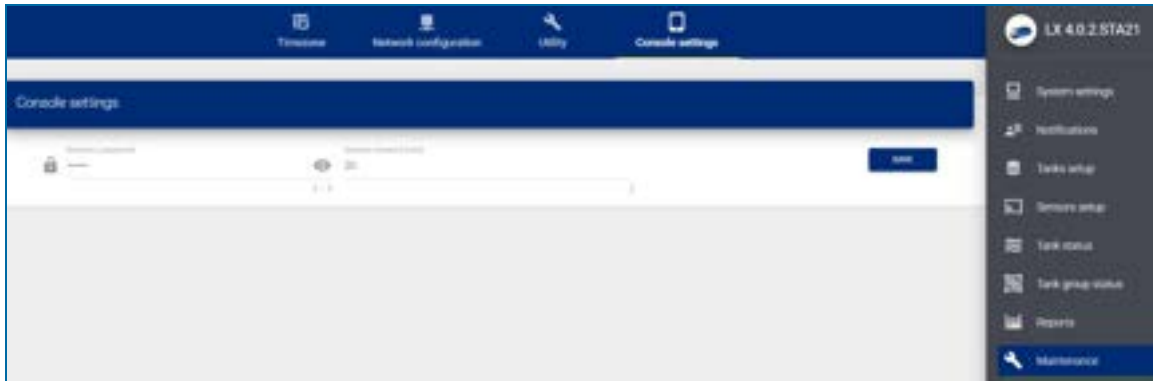

In this section, the numeric password to get access to the Maintenance section on the Graphical User Interface of the console can be changed.

The timeout session gives the time that the user can be logged in to the Maintenance section before the system automatically logs the user out.

Section 13 - Change Password

The screenshot shows a 'Password change' form. At the top is a dark blue header with the text 'Password change'. Below the header, the form contains the following elements:

- 1**: A 'User' drop-down menu with '1 Admin' selected.
- 2**: A 'Current' password text field with an 'eye' icon to its right.
- 3**: A 'New' password text field with an 'eye' icon to its right.
- 4**: A 'Confirm' password text field with an 'eye' icon to its right.
- 5**: A blue 'SAVE' button.




NOTE: Only an Admin user can change passwords.

1. Select the applicable **User** from the drop-down.
2. Enter the **Current password** for the selected user.
3. Enter the **New password**.
4. Enter the **new password** again in the *Confirm* field.
5. Click **Save** when you have completed all fields.




TIP: As you type your password only neutral "bullet" characters will show (e.g. •••••). Select the "eye" icon  to show the password characters as you type.

Section 14 - Logout

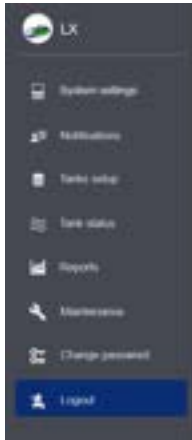


Select **Logout** from the *Main Menu*. The Login screen will come into view.

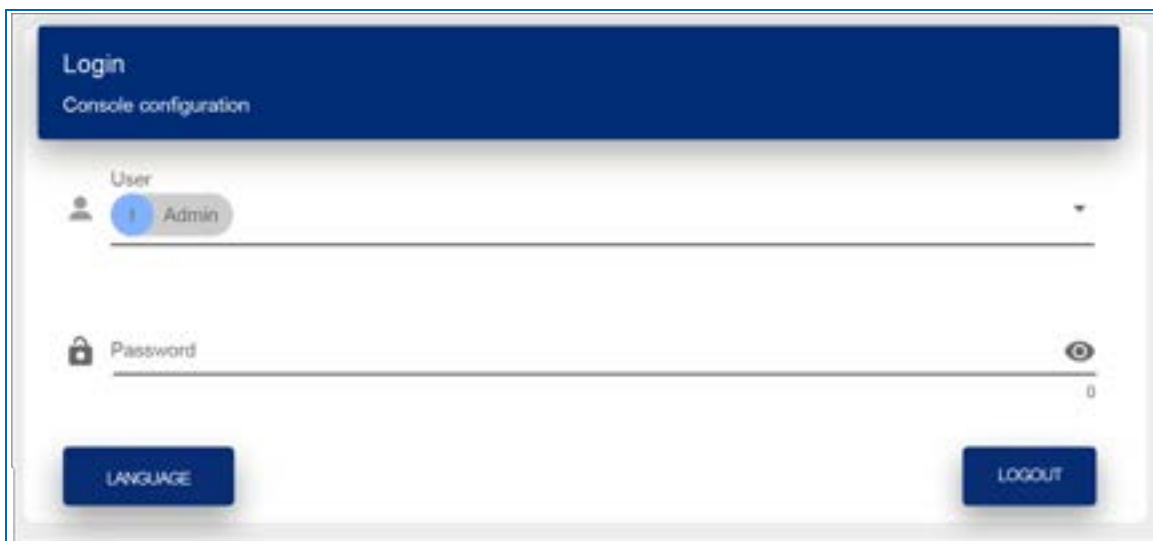

Click the **Logout** button to log out of the console.

Section 15 - Guest Account

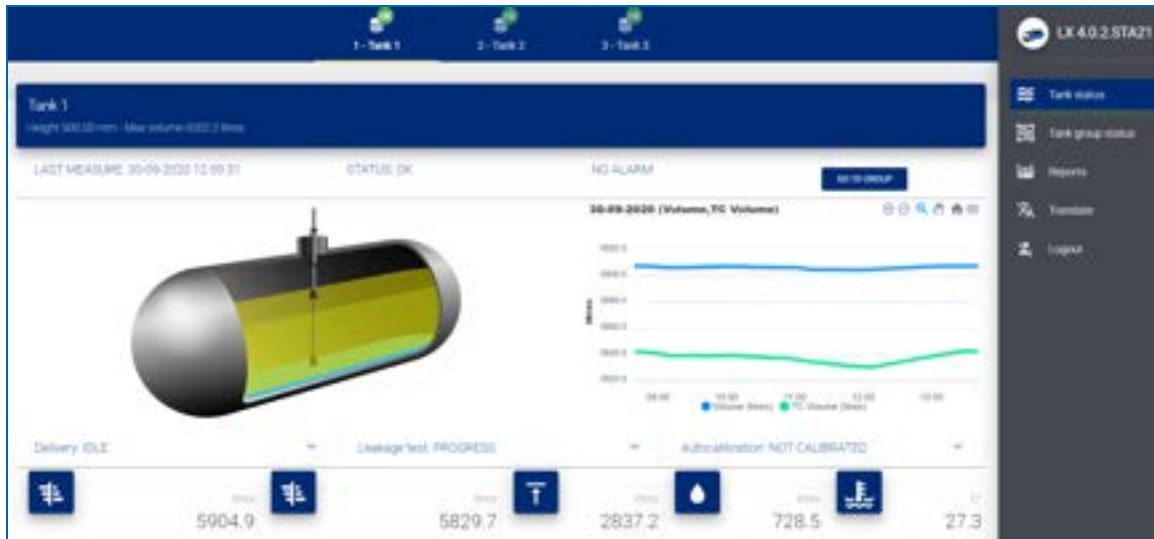

A Guest account only gives access to the Tank Status page and a view of data from Reports.

Section 16 - Technical Support

When you ask for technical support from DFS, it is recommended that you give direct access to the console over the internet through ports 3000 and 22. As an alternative, the console can be connected to a site computer and technical support can get access through a third-party program (such as TeamViewer). If technical support cannot get access to the console in one of these two methods, the user must supply technical support with the log files and the database backup of the console.

Refer to ["Utility" on page 90](#) for information on log files and the database backup in the console.

Appendix - Maglink LX PLUS and LX Ultimate Pressurized Line Leak Detection (PLLD)

Line Leak Setup

The Line Leak Setup menu is used to:

- Configure the PLLD-DAS (or older model I/O module) and the LIM (Line Interface Module).
- Configure the pipeline characteristics (length, size, Beta factor).
- Schedule leak tests (run a test now/later, run automatic testing).

The screenshot shows the 'New Line' configuration window. At the top, a '+' icon in the menu bar is circled with a '1'. Below the menu bar, there are tabs for 'Settings', 'Pipeline', 'Leak test', 'History', and 'STP dashboard'. The 'Settings' tab is active. It contains several fields: a 'Name' field (circled with a '2'), an 'Enabled' toggle switch (circled with a '3'), a 'Name' field for the line (circled with a '4'), a 'Tank' drop-down menu (circled with a '5'), a 'MAGLINK ID' field (circled with a '7'), a 'Pipeline ID' field (circled with a '8'), a 'Length' field (circled with a '6'), a 'LIM' field (circled with a '9'), and a 'Beta factor' field (circled with a '10'). At the bottom right, there is a red 'DELETE' button.

1. Click on the “+” icon in the top menu bar to add a new PLLD configuration. Each PLLD sensor must have its own configuration.

A. Settings

2. **Number:** Enter a **number** to identify the PLLD sensor configuration.
3. **Enabled:** When the “Enabled” button is in its ON position, the PLLD configuration is active. The system will try to start tests on the applicable pipeline.



NOTE: If the “Enabled” button is OFF, then the system will not try to run tests on the applicable pipeline. Pressure readings will not be received and the pipe stiffness calibration procedure will not be able to start.

4. **Name:** Enter a **name** to identify the line.
5. **Tank:** Select the **tank number** from the drop-down that has the STP with the PLLD sensor installed.

MAGLINK I/O (PLLD-DAS in new software versions)

6. **Sensor span:** The default value is 87 psi. *Do not change this value.*
7. **Address:** Select address **1** for the first PLLD-DAS module, address **2** for the second PLLD-DAS module, and so on.

NOTE: There can be more than one PLLD-DAS module connected to the LX Plus/Ultimate console. Each PLLD-DAS module must have its address set by the dip switches on its motherboard.




Only one Maglink I/O module can be connected to the LX Plus/Ultimate console.

For more information on how to set the PLLD-DAS address Dip Switches, refer to the ID Addresses/Dip Switches sub-section of the PLLD-DAS section of the [M2050-PLUS MagLink LX Plus Installation Manual](#) or [M2060 MagLink LX Ultimate Installation Manual](#).

8. **Position:** Enter the **Position** (connector slot) where the PLLD sensor is connected to the PLLD board.
 - The PLLD board has 8 connector slots.




NOTE: For PLLD-DAS: Position 1 is at the top (CH1). See the illustration below.

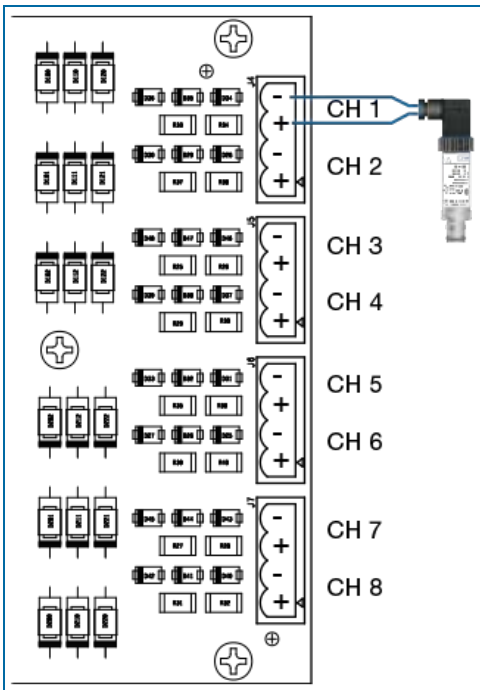



NOTE: For MagLink I/O: Slot No1 is next to the Green LED. Slot No8 is on the opposite side of the Green LED. See schematic below.

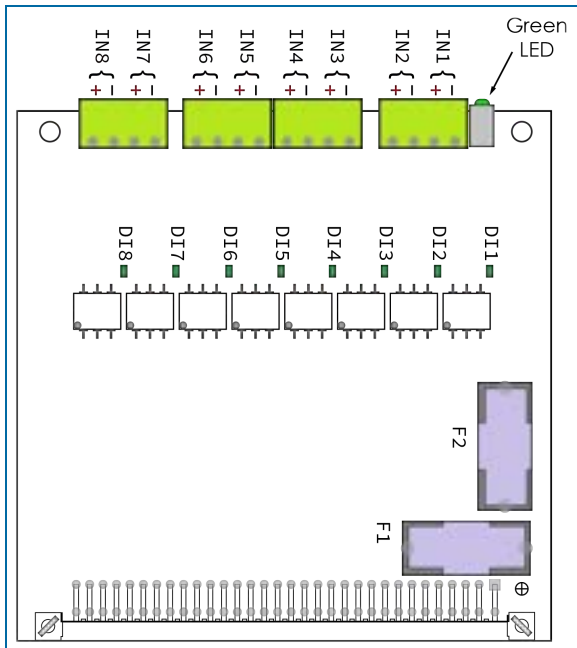

The PLLD board must be installed on the top slot of the I/O, see the image below.



LIM (Line Interface Module)

9. **Device:** Select the LIM address identification number from the drop-down (select 1 through 4). Each LIM module must have its own LIM address. Use the rotary switch on the LIM board to configure the LIM address.



INFORMATION: Refer to the [M00-20-8321-LIM LIM Procedure Guide](#) for information on configuration of the LIM device..

10. **Channel:** Select the LIM Channel from the drop-down (1 through 4) where the applicable STP is connected

Pipeline

1. **Line length:** Enter the total length of the pipeline (from the STP to the last dispenser. Include the length of all branches that are installed between the STP and dispensers)
2. **Pipeline:** A series of specific pipelines is included in this field. The user can select a pipeline and the system will automatically populate the volume/length parameter in the next field.



NOTE: If your pipeline is not listed here, you can select the closest pipeline and manually enter the volume/length parameter in the next field (it will override the automatically selected volume/length).

3. **Volume/length:** You can keep the default value (automatically given when a Pipeline is selected above) or, manually enter a specified value.



NOTE: If you enter a value manually, make sure you use the correct units of measure.

4. **Minimum Test Pressure:** This is the minimum pressure in the pipeline during the leak test. Usually the pipeline pressure is more than 20 psi. It is recommended to keep the default value.
5. **Minimum Dispensing Pressure:** This is the minimum pressure in the pipeline during normal dispensing.
6. **Beta:** Pipe stiffness in psi and pipe material can have an effect on pressure calculations. Refer to the "Pipe Data" tables at the end of this Appendix. These values are theoretical.
7. **Calibrated Beta:** This is the pipe stiffness in psi that has been calculated by the console's algorithm during the process "Beta calibration" (internal process that can calculate the pipe stiffness through a controlled leak in the system). The system uses the Calibrated Beta value for the leak rate calculations once it has been calculated and shown on the field here. If there is no Calibrated Beta value, the system will use the theoretical Beta for the leak rate calculations.
8. **RESET button:** If you click the RESET button, the Calibrated Beta value is erased and the system will use the theoretical Beta for the leak rate calculations.
9. To open the "Calibrate" panel, select the arrow on the right side of the collapsed panel.

Calibrate



The system can calculate pipe stiffness in the "Calibrate" panel. The user must start a controlled leak in the system for the calibration to occur.

10. **Leak generator (gph):** Enter the type of the leak generator. The most common leak generators can start a 3 gallon per hour (gph) leak at 10 psi.
11. **Number of calibration cycles (3-12):** During each calibration cycle the system will pressurize the STP. It will then stop the STP and record the pressure in the line. It is recommended to complete the maximum number of cycles (12) for the best calibration results.
12. **Start calibration immediately:** If this slider button is enabled (pushed to the right and shown in blue), the system will then start the calibration sequence as when the START button is clicked.

If the slider button is disabled, when the START button is clicked: the system waits for the dispenser nozzle to be picked up momentarily, then be put back into the cradle. This will cause the system to start the calibration once the nozzle is back into the cradle. This method is used to start the calibration

process from the forecourt (the technician lifts the nozzle for 2 seconds and puts the nozzle back in the cradle. The calibration will then start).

13. **Calibration status:** This is an information window that shows the current status of the process.
14. **START button:** This starts the calibration sequence (this can be immediately or through the nozzle signal . Refer to “Start calibration immediately” in the previous step.).
15. **STOP button:** This will stop the calibration sequence.

Click the **SAVE** button to save the current pipeline setup.



NOTE: If the DELETE button is selected, it will erase the PLLD configuration.

Leak Test

Automatic LLD leak test – click the Save button to save the settings

1. **Enabled:** When this button is “Enabled,” the system will run a leak test automatically that uses specified frequencies.

2. **3 gph (11.36 lph)**: The automatic 3 gph (11.36 lph) test will run continuously every hour. The test will start after the last dispensing transaction if the last test was done more than 1 hour before.
3. **0.2 gph (0.76 lph)**: Select the applicable frequency. Select a monthly warning in days if applicable (if a leak test has not been done within "x" days, then a warning will be caused).
4. **0.1 gph (0.38 lph)**: Select the applicable frequency. Select a yearly warning in days if applicable (if a leak test has not been conducted within "x" days, then a warning will be caused).

Scheduled Leak Test

5. **Leak Test Rate**: Select the leak test rate. Then select if the test will start now now (click the **NOW** button or later at a scheduled date and time by (select the **SCHEDULE** button).
6. **Apply** button: Click **Apply** to apply the settings.
7. **Delete**: The Delete button will delete the scheduled leak test configuration.
8. Click **SAVE** to save the setup. Click **DELETE** to erase it.

Relays

In the Relays tab, the user can program a relay to be started when an LLD condition occurs. Configure the internal, external (an I/O module is necessary for an external relay) or OM4 relays.

The available conditions that can cause a relay to start include:

SENSORS NO LINK (there is no communication between console and PLLD-DAS or Maglink I/O PLLD module)

NO STP LINK (there is no communication between console and LIM)

SENSOR OPEN (there is no reading from PLLD sensor)

SENSOR SHORT (the PLLD sensor wires shorted)

STP CONTROLLER (the STP contactor fused or stuck)

LINE LEAK (a leak test failed)

NO LEAK TEST (no leak test has been done as the WARNINGS setup in the Leak Test tab)

NO ANNUAL LEAK TEST (no annual leak test has been done as the WARNINGS setup in the Leak Test tab)

PRESSURE LOW (the STP dispensing pressure is less than the Minimum Dispensing Pressure configured at the Pipeline tab)

STP Shutdown



In the STP Shutdown tab the user can configure the conditions under which the STP will automatically shutdown.

1. A 3 gph (11.36 lph) line leak fail will always shut down the STP.
2. Where applicable, select the STP to be shutdown during a 0.2 gph (0.76 lph) fail and/or a 0.1 gph (0.38 lph) fail.
3. The STP can also be configured to shutdown by other causes, (for example, high water detected by the probe in the tank or by an environmental sensor activating).
 - a. To configure an event that will cause an STP shutdown, select **ADD STP SHUTDOWN REASON**.
 - b. Select the applicable event.
 - c. The *Delay* is a timer that starts a countdown from the point in time the event was caused. The STP will shutdown once the timer ends.

In the example shown in the image above, an HH Water alarm event on Tank 1 has been caused that will shutdown the STP after 10 continuous hours that the alarm is active.

Line Leak Status



1. **Pressure** icon: This shows the current pressure in the pipeline.
2. **Hook** icon: This changes to show to “Active” when the hook signal is in operation.
3. **STP** icon: This changes to show that the STP is “On” when the STP is operational.
4. **Leak Test Rate**: Select a **Leak Test Rate** from the drop-down. Click the **Start** button to start an On Demand test. Click the **Stop** button to stop a test that has been started.
5. **Test Status Idle**: This shows *Idle* if a test is not in progress.
6. **Type**: This shows the type of leak test.
7. **Test Results**: Shows the result of the test. Possible results are: PASSED, FAILED, ABORTED (STOPPED) and IN PROGRESS.
8. **Start Time**: This shows the time when the test started.
9. **Running Time**: This shows the total time of the test since it started.
10. **Estimated Remaining Time**: Approximate time until the test is complete.
11. **Executed Cycles**: The system will start and stop the STP a number of times during the test to get pressure readings. Each start and stop sequence is considered to be a cycle. This field shows how many cycles have been completed so far.
12. **Reference Pressure**: This is the reference pressure at which the test will run. A 3 gph test is referenced at 10 psi.
13. **Running Pressure**: This is the pressure in the pipeline once the STP has stopped fueling.

14. **Leak Rate:** The calculated leak rate in liters/gallons per hour.

Graphical User Interface

Refer to the PLLD section of [M2052 MagLink LX 4, LX Plus & LX Ultimate User Manual](#).

Pipe Data Tables

The data for some industry known pipes is shown below.

<i>RIGID PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
FIBERGLASS (2 INCH)	25000	0,017	0,0253	0,0025
FIBERGLASS (3 INCH)	25000	0,038	0,0566	0,0057
STEEL (2 INCH)	50000	0,016	0,0238	0,0024
COPPER (1 INCH, TYPE K)	55000	0,003	0,0045	0,0004

<i>ADVANCED POLYMER TECHNOLOGY FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
1.5-INCH (P150SC)	8800	0,008	0,0119	0,0012
1.75-INCH (P175SC)	7400	0,01	0,0149	0,0015
2.0-INCH (P200SC)	5600	0,014	0,0209	0,0021
2.5-INCH (P250SC)	4400	0,021	0,0313	0,0031
1.5-INCH (XP-150-SC)	5042	0,008	0,0119	0,0012
2.0-INCH (XP-200-SC)	5420	0,014	0,0209	0,0021

<i>AMERON FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
DUALOY 3000/FLS III	5400	0,008	0,0119	0,0012
DUALOY 3000/FLS III	7600	0,014	0,0209	0,0021

<i>BRUGG FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
FLEXWELL HL-40 (1.5 INCH)	33000	0,008	0,0119	0,0012

<i>ENVIRON FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
GEOFLEX D (1.5 INCH)	14500	0,008	0,0119	0,0012
GEOFLEX D (2 INCH)	11000	0,014	0,0209	0,0021
GEOFLEX D (3 INCH)	4100	0,031	0,0462	0,0046
GEOFLEX PLUS D (1.5 INCH)	16500	0,008	0,0119	0,0012

<i>FURON FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
SP15 (1.5 INCH)	9000	0,008	0,0119	0,0012
SP20 (2 INCH)	7000	0,014	0,0209	0,0021
CP15 (1.5 INCH)	11650	0,008	0,0119	0,0012
CP15DW (1.5 INCH)	5400	0,008	0,0119	0,0012
CP20 (2 INCH)	7600	0,014	0,0209	0,0021
COFLEX (1.5 INCH)	14500	0,008	0,0119	0,0012
COFLEX (2 INCH)	11000	0,014	0,0209	0,0021

<i>NUPI FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
SMARTFLEX (1.5 INCH)	8600	0,008	0,0119	0,0012
SMARTFLEX (2.0 INCH)	15000	0,014	0,0209	0,0021

<i>PETROTECHNIK FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
UPP EXTRA (63 mm)	1500	0,014	0,0209	0,0021

<i>TOTAL CONTAINMENT FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
PP1500 (1.5 INCH)	2400	0,008	0,0119	0,0012
PP1501 (1.5 INCH)	3500	0,008	0,0119	0,0012
PP1502 (1.5 INCH)	7300	0,008	0,0119	0,0012
PP1503 (1.5 INCH)	2500	0,008	0,0119	0,0012
PP2500 AND PP2501				
PP2502 (2.5 INCH)	8700	0,021	0,0313	0,0031
PP2503 (2.5 INCH)	3100	0,021	0,0313	0,0031
CP1501 (1.5 INCH)	13000	0,008	0,0119	0,0012
CP1503 (1.5 INCH)	4500	0,008	0,0119	0,0012
CP2503 (2.5 INCH)	3900	0,021	0,0313	0,0031

<i>FLEXWORKS FLEXIBLE PIPE TYPES</i>	<i>BETA</i>	<i>Gals/inch</i>	<i>Liters/cm</i>	<i>Liters/mm</i>
C15 (1.5 INCH)	14500	0,008	0,0119	0,0012
C20 (2.0 INCH)	11000	0,014	0,0209	0,0021
C30 (3.0 INCH)	4100	0,031	0,0462	0,0046

WIRING DIAGRAM

Refer to [FMM2058-PLS LX Plus/Ultimate Wiring Diagram](#).

Site Configuration Chart

Use the chart below to record information that will be necessary for the programming of the PLLD in the LX PLUS.

Tank No	Product	STP No	STP manifolded	Pipe inner Diameter (in/cm/mm)	Pipe Type	Beta	Pipe length (in/cm/mm)	Pipe volume (gals/in, lts/cm, lts/mm)	PLLD DAS / I/O channel	LIM1 CHANNEL	LIM2 CHANNEL

NOTES:

- At **STP manifolded**, record if a specified STP is manifolded with another STP. Enter the manifolded STP in the box. If there is no manifold, enter N/A.
- At **Pipe volume**, use this formula: If cm is used as the unit of measure, then $\text{Pipe volume liters/cm} = 3.14 * \text{Diameter (cm)} * \text{Diameter (cm)} + 4000$. If inches is used as the unit of measure, then $\text{Pipe Volume Gallons/inch} = 3.14 * \text{Diameter (in)} * \text{Diameter (in)} * 0.00108$.

Appendix How to Configure a Siemens LR120 Radar

Before you connect the Siemens LR120 Radar to a Maglink LX console, the SIEMENS mobile IQ app must be used to configure the device.

- After you connect the Radar device to a power source (8-30 V DC), a Bluetooth PIN is required to connect to the device.
- When a connection has been made, go to Setup > Detailed setup > Communication > Address, and change the address (the default is 246). This address will show as a Serial Number in the Maglink LX.



IMPORTANT: Separate addresses must be set up for each site. Two or more Radar devices cannot have the same address.

- After address configuration, the Radar device can be connected to the Maglink LX console.
- On Web UI > Tanks setup > Settings Serial Number, the Radar device address must be entered. After "QUERY PROBE" the system should automatically adjust the probe type to "Radar LR120."


(Continued on next page)

- When a liquid is selected in the "Product Family" drop-down, the "Application type" list-box will show the values below (see the screen image below):
 - Storage
 - Process
 - Wetwell
 - Plastic
 - Open



(Continued on next page)

- When "Solid" is selected in the "Product family" drop-down, the "Application type" list-box will show the values below (see the screen image below):
 - Silo
 - Bin/Hopper
 - Open

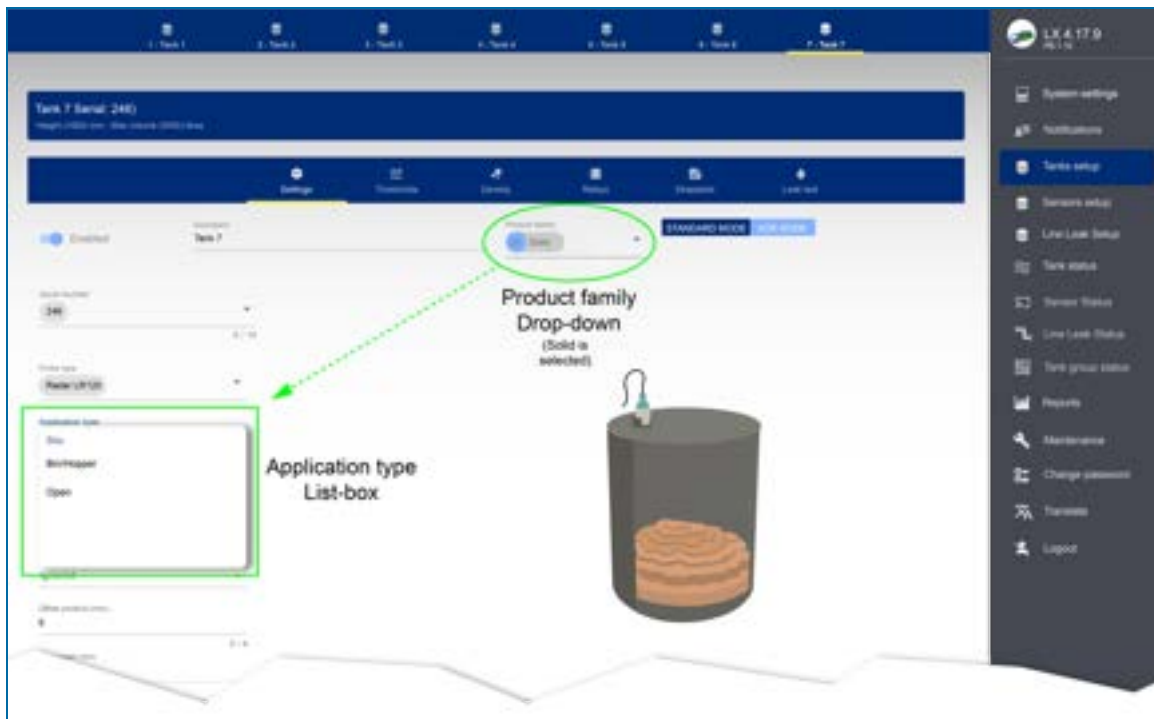

Revisions-M2051

Revision #	ECO	Effective	Software Version	Key Changes
0	1784	8/19/20		Initial Release
1	1836	12/3/2020		Added Autocalibration and Reconciliation. Updated screens and procedures
2	1944	10/8/2021		New Start Italiana address, update ip address set up, available languages, new system screen, removed DIP-Switch section, Density and ACR Results update, new Tech Support procedure.
3	1998	3/14/2022		General Updates, screen updates, AEF Thresholds, Sensor relays.
4	DB	9/11/2023		General Updates, screen updates, add languages, new AEF w/PG and OPW, PLLD, PLLD-DAS, Siemens LR120 Radar setup. Added Relays
5	DB	11/21/2023		CSLD setup and reports.
5.1	LC/DB	3/22/2024		Add LX Ultimate
6	NA/WP/DB	6/17/24		Security Best Practices, secure browser instructions
7	DB	7/1/2024		SMTP Port options note
8	DB	TBD	4.19.11	General Updates, Login P/Ws, Blankdoor, TSG DCD, End of Day (Shifts)



NOTE: It is possible that older software versions might not support all features

ProGauge

